

1998 E320

Side 1		A Fuse designation		⊕ 210 545 15 00	Side 2		A Fuse designation		⊕ 210 545 15 00
function	fuse - no.	function	fuse - no.	function	fuse - no.	function	fuse - no.		
Adjustable mirror, driver's side	16,(3)*	Dome light rear	(3,19)*	Locking check - back	41,(5,19)*	Tail gate closing assist (T-model)	(5,7,19)*		
Adjustable mirror, passen. side	(1,3)*	Driver's power window	16,(3)*	Make - up mirror (SE)	(4)*	Telephone (SE)	23,(15)*		
Adjustable steer. column (SE)	(8,9,13,14)*	Elect. Stability Program (SE)	(11)*	Oil cooler (SE)	19	Tilting / sliding roof (SE)	41,(4)*		
ADS (SE)	(11)*	Engine fan	20,41	Parktronic system (SE)	15	Trailer power supply (SE)	(12)*		
Airbag / sidebag control unit	13	Engine residual heat system (SE)	4,7,(5,19)*	Passenger side power window	(1,3)*	Trunk light	(3,19)*		
Airbag fault indicator lamp	10	Fanfare	40,41	Power window, rear left	18,(3)*	Turn signal, l. s. indicator lamp	41		
Anti - theft alarm system (SE)	(5,11,19)*	Folding exterior mirror (SE)	14	Power window, rear right	(2,3)*	Washer water heater	42		
Autom. comfort seat belt (SE)	12	Fuel pump	(5)*	Radio (SE)	11,(5)*	Windshield washer system	41,43,(5,19)*		
Autom. dimming ext. mirror (SE)	(4)*	Garage door opener	(4)*	Rain sensor (SE)	(4)*	Wipe system	41,44		
Autom. dimming int. mirror (SE)	(4)*	Glove compartment light	3	Rear head release	41,(5,19)*	****	****		
Autom. seat occupied recognition	13	Hazard warning flasher	41	Rear plug socket (T-model)	11				
Autom. temperature control	4,7	Headlamp flasher	3,41	Rear window wiper (T-model)	12,41,44,(19)*				
Blower motor AC	4,7	Headlamp range Xenon (SE)	15	Remote trunk release	(2,5,19)*				
Central locking system	16,41,(1,4,5,19)*	Headlamp washer system (SE)	41,45	Reverse gear recognition	(3)*				
Cigar lighter	1 or 6	Heated mirror, driver's side	16	Seat adjustment (SE)	16,(1,8,9,13,14)*				
Convenience locking	16,41,(1,4,19)*	Heated mirror, passenger side	(1)*	Seat heater (SE)	12,(17,18)*				
Cooler box (SE)	(10)*	Heated rear window	41,(19)*	Sound system (SE)	(16)*				
Courtesy lights	16,18,(1,2,19)*	Heater booster (SE)	17	Steering lock	9				
Dome light front	(4)*	Instrument cluster	4,7	Sun blind for rear window (SE)	12				

fuse - no.	fuse rating+col.	fuse - no.	fuse rating+col.
2,10,23,42,(3,11,15)*	7.5A - brown	(4,5,8,8,8,12,13,14,16)*	25 A - natural
4,12,13,40,43,(10)*	10 A - red	20, 45	30 A - green
1,3,6,7,9,11,14,15,19,41	15 A - blue	44,(19)*	40 A - orange
16,17,18,(1,2,7,17,18)*	20 A - yellow		

*Note : Fuses in brackets (thin lettering) are to be found under the rear seat. Further fuses are to be found in the cockpit near the light switch. The fuse extractor is to be found in the vehicle tool kit. (SE) = function of a special equipment item.

Please note : Further fuses on side 2 !!!

Warning: Danger of overloading! Only use specified fuses.


Side 1		A Fuse designation		⊕ 210 545 17 00	Side 2		A Fuse designation		⊕ 210 545 17 00
function	fuse - no.	function	fuse - no.	function	fuse - no.				
Adjustable mirror, driver's side	3,(16)*	Engine residual heat sys. (SE)	5,19,(4,7)*	Reverse gear recognition	3				
Adjustable mirror, passen. side	1,3	Fuel pump	6	Seat adjustment (SE)	1,8,9,13,14,(16)*				
Adjustable steer. column (SE)	8,9,13,14	Garage door opener	4	Seat heater (SE)	17,18,(12)*				
ADS (SE)	11	Heated mirror, passen. side	1	Sound system (SE)	16				
Anti-theft alarm system (SE)	5,11,19	Heated rear window	19,(41)*	Tail gate closing assist (T-model)	5,7,19				
Autom. dimming ext. mirror (SE)	4	Locking check - back	5,19,(41)*	Telephone (SE)	15,(23)*				
Autom. dimming int. mirror (SE)	4	Make - up mirror (SE)	4	Tilting / sliding roof (SE)	4,(41)*				
Central locking system	1,4,5,19,(16,41)*	Passen. side power window	1,3	Trailer power supply (SE)	12				
Convenience locking	1,4,19,(16,41)*	Power window, rear right	2,3	Trunk light	3,19				
Cooler box (SE)	10	Radio (SE)	5,(11)*	Windshield washer system	5,19,(41,43)*				
Courtesy lights	1,2,19,(16,18)*	Rain sensor (SE)	4	****	****				
Dome light front	4	Rear head release	5,19,(41)*						
Dome light rear	3,19	Rear window wiper (T-model)	19,(12,41,44)*						
Elect. Stability Program (SE)	11	Remote trunk release	3,5,19						

fuse - no.	fuse rating+col.
3,11,15,(2,10,23,42)*	7.5A - brown
10,4,12,43)*	10 A - red
(1,3,6,7,9,11,14,15,19,41)*	15 A - blue
1,2,7,17,18,(16,17,18)*	20 A - yellow
4,5,6,8,9,12,13,14,16	25 A - natural
19,(41)*	40 A - orange

*Note: Fuses in brackets (thin lettering) are to be found under the rear seat. Further fuses are to be found in the cockpit near the light switch. The fuse extractor is to be found in the vehicle tool kit. (SE)=function of a special equipment item.

Please note: Further fuses on side 2 !!!

Warning: Danger of overloading! Only use specified fuses.

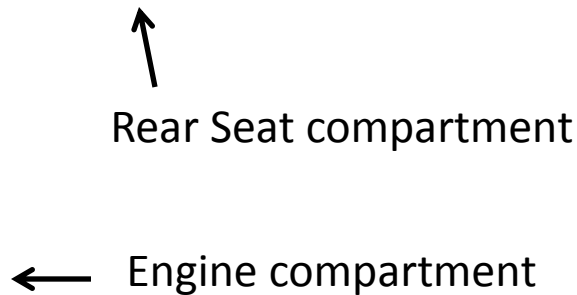

01.04.1987

01.04.1987