

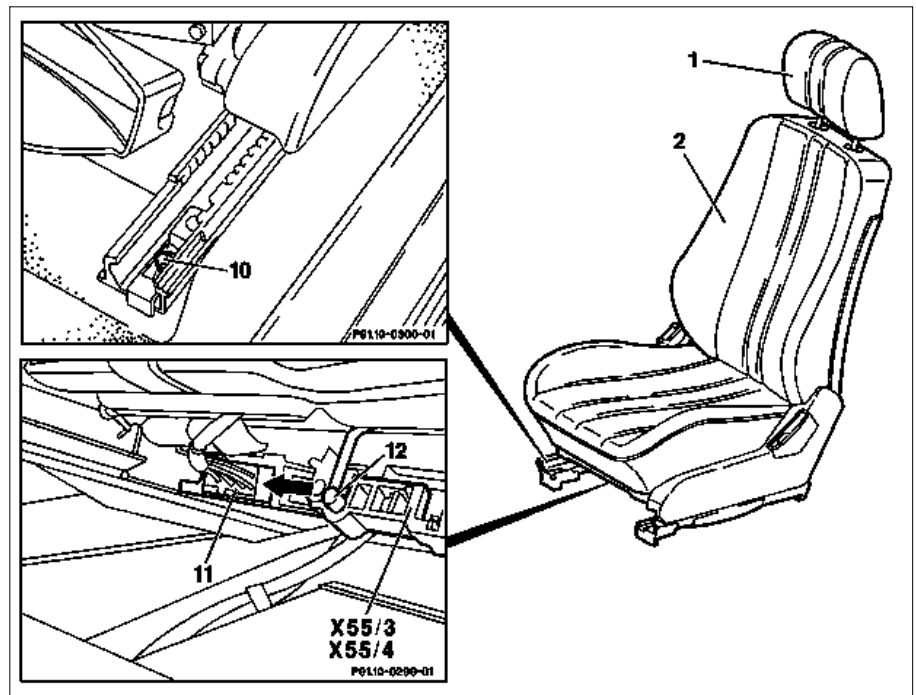
P91.10-0301-09

- 1 Head restraint
- 2 Front seat
- 3 Trim panel
- 4 Belt end fitting




- 5 Screw
- 6 Covers
- 7 Screw

 
 
 
 

 
- 8 Screw
- 9 Cover
- 13 Arresting bolts

- 1 Head restraint
- 2 Front seat
- 10 Front screw
- 11 Connector
- 12 Pneumatic line
- X55/3 Left seat contacting strip
- X55/4 Right seat contacting strip



P91.10-0298-06

 	Removal, installation		
1	Remove head restraint (1)		
2	Move front seat (2) toward front		
3	Pull off cover (3) on belt end fitting (4)		
4	Unscrew screw (5, a/f 17) on belt end fitting	Nm	*BA91.40-P-1001-01A
		 When installing, screw on belt end fitting so that it can move .	
5	Pull off cover (6) on rear seat rails		
6	Unscrew screws (7 and 8) on rear seat rails	Nm	*BA91.10-P-1001-01A

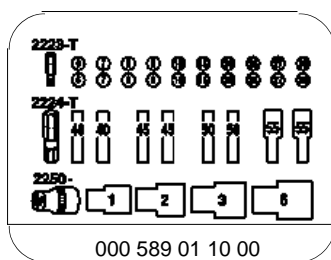
		 Use E12 external Torx socket wrench attachment. 	*000589011000
N	Move front seat (2) toward rear		
8	Remove fire extinguisher from holder		
9	Pull off 2 covers (9) on front seat rails		
10	Unscrew 2 screws (10), on front seat rails	  Use E12 external Torx socket wrench attachment. 	*BA91.10-P-1001-01A *000589011000
11	Disconnect connector (11) and pneumatic line (12) from front seat cushion frame on contacting strip (X55/3)		
12	Lift and remove front seat (2)	 When installing insert arresting bolts (13) into mounting hole in rear consoles.	
13	Install in opposite order		

### Front seats

Number	Designation		Model 210
BA91.10-P-1001-01A	Screw on seat rail	Nm	50

### Seatbelts/emergency tensioning retractors

Number	Designation		Model 210
BA91.40-P-1001-01A	Screw on belt end fitting	Nm	35



TORX bit set