
AR82.10-P-4905T Removing taillamp 25.9.01

MODEL 211.0





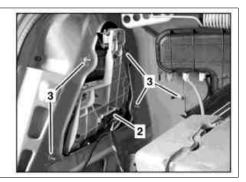

P82.10-2969-07

- 1 Bracket
- 2 Electrical connector
- 3 Nuts

E3 Left taillamp E4 Right taillamp M40/1 Pneumatic pump for dynamic seat control (with code (433) left dynamic seat, incl. multicontour seat)

XX	Remove/Install		
1	Remove side paneling in trunk	On vehicles without code (287a) through- loading feature On vehicles with code (287a) through-loading feature	AR68.30-P-4800T AR68.30-P-4800TA
2.1	Remove bracket (1) with pneumatic pump for dynamic seat control (M40/1) from retainer and put to one side	Only if removing left taillamp (E3). On vehicles with code (433) left dynamic seat, incl. multicontour seat	
3	Separate electrical connector (2)		
4	Remove nuts (3) and left taillamp (E3) or right taillamp (E4)		
5	Install in the reverse order		
6	Perform function check of left taillamp (E3) or right taillamp (E4)		