


MODEL 211.080 /082 /084 /087 /089 /092 except CODE (489) AIRmatic (semi-active air suspension)

| | | | |
|------------------|--|---|--|
| | Remove/install | | |
| ⚠ Danger! | Risk of death caused by vehicle slipping or toppling off of the lifting platform. | Align vehicle between the columns of the lifting platform and position the four support plates at the lifting platform support points specified by the vehicle manufacturer. | AS00.00-Z-0010-01A |
| | Notes on self-locking nuts and bolts | All models | AH00.00-N-0001-01A |
| 1 | Remove rear wheel Remove/install wheels, rotate if necessary | | AP40.10-P-4050Z |
| 2 | Remove spring control arm cover | | |
| 3 | Detach shock absorber from spring control arm | Push together shock absorber and position at side of spring link. | *BA32.25-P-1003-03A |
| ⚠ Danger! | Risk of injury caused by pinching or crushing when working on springs or spring bodies that are under load | Use only approved tensioning devices; shield off hazard area if necessary. Inspect special tools for damage and proper operation (visual inspection). Wear protective gloves. | AS00.00-Z-0001-01A |
| 4 | Tension rear spring Springs; general background information. | Mark the position of tensioning plates relative to rear spring using oil chalk. Installation: Observe oil chalk markings. Tensioning device Tensioning plates | AR32.20-P-0200-06T AH32.20-P-9404-01A *202589013100 *211589036300 |
| 5 | Install in the reverse order | Installation: Only tighten bolts and nuts of the chassis components in the curb condition. | |
| 6 | Check headlamp adjustment Check and correct headlamp adjustment | | AP82.10-P-8260T |


Rear axle shock absorber

| Number | Designation | Model 211 steel suspension |
|--------------------|--|----------------------------|
| BA32.25-P-1003-03A | Self-locking nut for attaching shock absorber to spring link | Nm - |
| | | M10 Nm 55 |

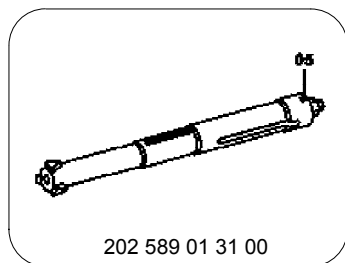

202 589 01 31 00

Tensioning device

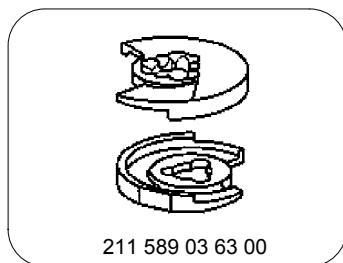

211 589 03 63 00

Clamping plates