


# Installing Wheel Sensor

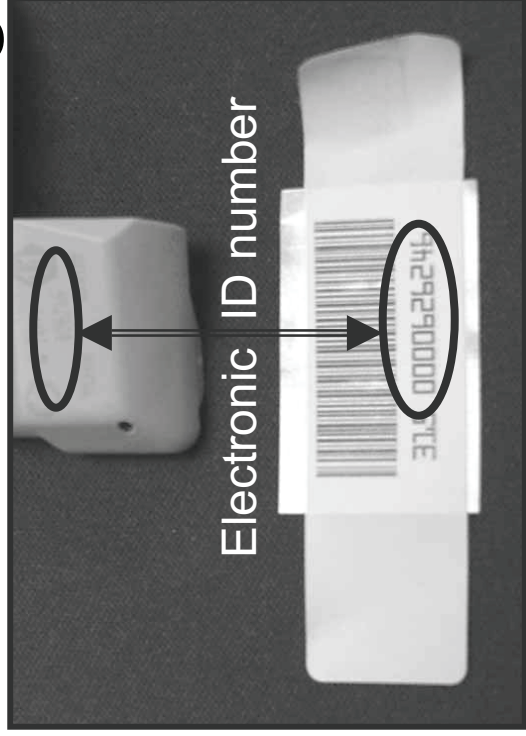

- Always use new valve
- 315mhz must show on U.S. Sensor
- Record electronic ID number of sensor
- 2.0mm hole in valve must face upward
- Spacer has 45° bevel on both sides
- When installing new sensor, use 2.0mm pin (6) to counter hold valve (2) while tightening lock nut (4)
- Hollow screw and nut both torqued to 4nm

