

MODEL 211.0/ 2/ 6

Shown on model 211.0

- 1 Housing
 2 Negative terminal cover
 3 Positive terminal cover
 4 Screw
 5 Nut
 6 Bracket

G1/1 Additional battery



P54.10-2180-06

| | Remove/Install | | |
|----------------|---|---|-------------------------------------|
| Danger! | Risk of explosion caused by oxyhydrogen gas. Risk of poisoning and caustic burns caused by swallowing battery acid. Risk of injury caused by burns to skin and eyes from battery acid or when handling damaged lead-acid batteries | No fire, sparks, open flames or smoking. Wear acid-resistant gloves, clothing and safety glasses. Pour battery acid only into suitable and appropriately marked containers. | AS54.10-Z-0001-01A |
| | Notes on battery | | AH54.10-P-0001-01A |
| | Notes on AGM battery | | AH54.10-P-0002-01A |
| 1 | Disconnect battery ground cable | Model 211.0/6 Model 211.2 | AR54.10-P-0003T AR54.10-P-0003TA |
| 2 | Open engine hood and raise to vertical position | | AR88.40-P-1000T |
| 3 | Remove housing (1) | | |
| 4 | Open negative terminal cover (2) of additional battery (G1/1) | | |
| 5 | Unscrew bolt (4) of ground line and remove ground line | | *BA54.10-P-1013-01C |
| 6 | Open positive terminal cover (3) of additional battery (G1/1) | | |
| 7 | Unscrew bolt (4) of positive lead and remove positive lead | | *BA54.10-P-1013-01C |
| 8 | Unscrew nut (5) and fold bracket (6) upwards | | *BA54.10-P-1014-01C |
| 9 | Remove the auxiliary battery (G1/1). | | |
| 10 | Install in the reverse order | | |

Battery

| Number | Designation | | Model 211 |
|--------------------|---|-------|--------------|
| BA54.10-P-1013-01C | Bolt, battery cable to battery terminal on additional battery | M6 Nm | 3 |
| BA54.10-P-1014-01C | Nut, bracket for additional battery | M6 Nm | 3 |