Relay assignment of fuse and relay box in	⊯ GF
left side of engine compartment	

Driver-side fuse and relay module

f43 to f67 Fuses


N10/1 Driver-side SAM control unit

with fuse and relay module

I to T Relays

X Direction of travel

i The S relay (AIRmatic relay (K67)) and T (cutoff relay for interruptible loads (K75)) are only clipped on to the driver-side SAM control unit with fuse and relay module.

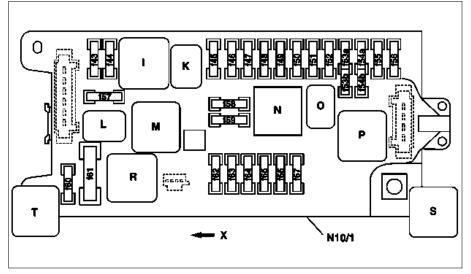

P54.15-2461-05

Relays	Designation Terminal 87 relay, engine (N10/1kl)	
1		
K	Terminal 87 relay, chassis (N10/1kK)	
LL	Starter relay (N10/1kL)	
М	SEQ pump control relay (N10/1kM)	
N	Terminal 15 relay (N10/1kN)	
0	Fanfare horn relay (N10/1kO)	
PPP	Terminal 15R relay (N10/1kP)	
R	Air pump relay (N10/1kR) except engine 113.990 (E 55 AMG)	
	Oil cooler fan relay (N10/1kR) only engine 113.990 (E 55 AMG)	
S	AIRmatic relay (K67) only for code (489) Airmatic Dual Control (semi-active air suspension)	
TT	Cutoff relay for interruptible loads (K75)	