


Driving systems

The following vehicle level settings can be selected when the vehicle is stationary and the engine is running:

Vehicle level when stationary	Use for	Ride height increase over normal	Automatic lowering	Indicator lamp (▷ page 210)
Normal	Normal operation	None	Max. approx. 0.6 in (15 mm)	Lamp off
Raised	Driving with snow chains or very rough road surface conditions	Approx. 1 in (25 mm)	Max. approx. 1 in (25 mm)	Lamp on

The switch is located in the lower section of the center console.

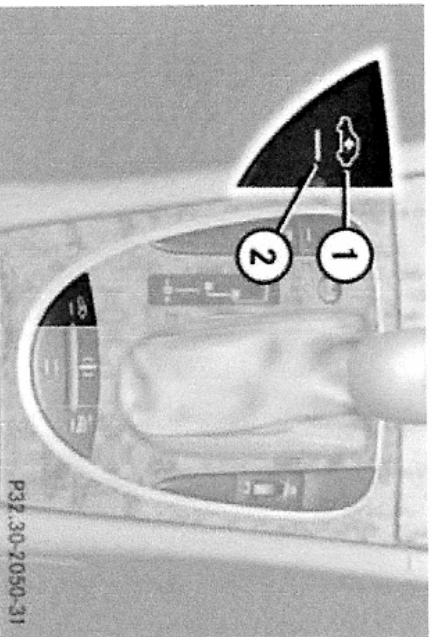

- 1 Vehicle level control switch
- 2 Indicator lamp

► Briefly press switch 1 to change from

"Normal" level to "Raised" level. When vehicle is at "Raised" level, pressing the switch will return the vehicle to "Normal" level.



At a speed of approx. above 75 mph (120 km/h) or if the speed amounts to between 50 mph (80 km/h) and 75 mph (120 km/h) for approx. five minutes the setting "Raised" is canceled. The message Level selec. canceled appears in the multifunction display.

If you do not drive in this speed range, the "Raised" level remains stored even if the key is removed from the ignition.