
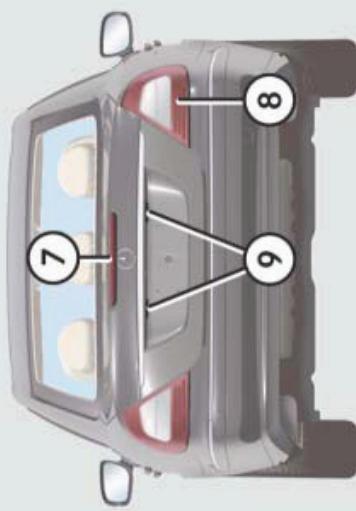


Practical hints

Replacing bulbs

Front lamps

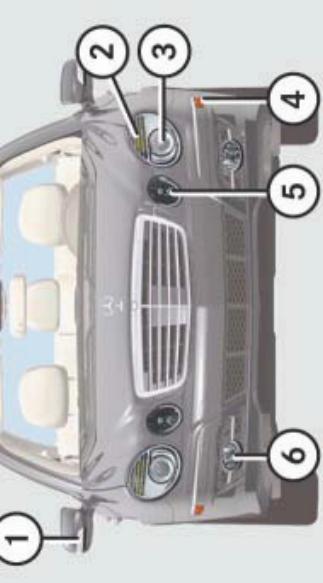

¹ Vehicles with Bi-Xenon* headlamps: Low beam and high beam use the same D1S-35W lamp. Do not replace the Bi-Xenon bulbs yourself. Contact your authorized Mercedes-Benz Center.

| Lamp | Type |
|---|----------------------|
| ⑤ Halogen headlamp: High beam/high beam flasher | H7 (55 W) |
| Bi-Xenon* headlamp: High beam flasher | H7 (55 W) |
| Halogen headlamp: Parking and standing lamp | W 5 W Blue Vision |
| Bi-Xenon* headlamp: Parking an standing lamp | LED |
| ⑥ Front fog lamp | H11 (55 W) |
| Corner-illuminating front fog lamp* | H11 (55 W) |

P54.00-2550-31

Practical hints

Replacing bulbs

Have the LEDs and bulbs for the following lamps replaced by an authorized Mercedes-Benz Center:

- Additional turn signals in the exterior rear view mirrors
- High mounted brake lamp
- Bi-Xenon* lamps
- Front fog lamps
- Rear lamps (except license plate lamps)
- Front side marker lamps


! Do not replace the LEDs yourself. You could otherwise damage the LEDs or parts of the vehicle. Only have the LEDs replaced by an authorized Mercedes-Benz Center.

Replacing bulbs for front lamps



PBZ.10-4431-31

- ① Housing cover for low beam halogen or Bi-Xenon* headlamp

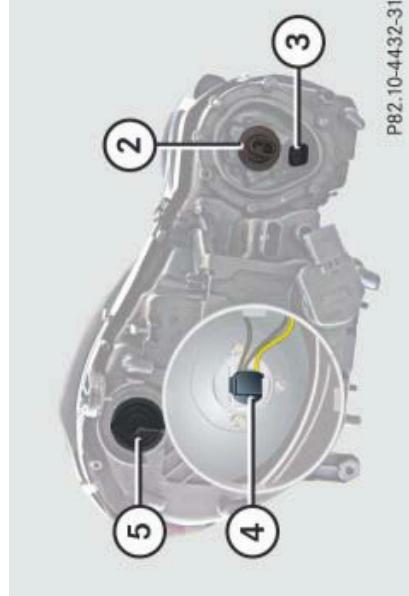

PBZ.10-4432-31

- ② Bulb socket for high beam headlamp/high beam flasher bulb
③ Bulb socket for parking and standing lamp bulb
④ Bulb socket for low beam headlamp bulb (halogen headlamps only)
⑤ Bulb socket for turn signal lamp bulb

Before you start to replace a bulb for a front lamp, do the following first:
► Turn the exterior lamp switch to position **0** (▷ page 137).
► Open the hood (▷ page 325).

Warning! **!**

Do not remove the cover ① for the Bi-Xenon* headlamp. Because of high voltage in Bi-Xenon* lamps, it is dangerous to replace the bulb or repair the lamp and its components. We recommend that you have such work done by a qualified technician.

Low beam bulb (halogen headlamps only)

- Turn housing cover ① counterclockwise and remove it.
- Turn bulb socket ④ with the bulb counter-clockwise and remove it.
- Pull the bulb out of bulb socket ②.
- Press the new bulb gently into bulb socket ④.
- Place bulb socket ④ back into the lamp and turn it clockwise until it engages.
- Align housing cover ① and turn it clockwise until it engages.

High beam bulb/high beam flasher bulb (halogen headlamps)/high beam flasher bulb (Bi-Xenon* headlamps)

- Turn bulb socket ② with the bulb counter-clockwise and remove it.
- Turn bulb socket ④ with the bulb counter-clockwise and remove it.
- Pull the bulb out of bulb socket ②.
- Press the new bulb gently into bulb socket ④.
- Place bulb socket ② back into the lamp and turn it clockwise until it engages.

Front turn signal lamp bulb

- Turn bulb socket ⑤ with the bulb counter-clockwise and remove it.
- Press gently onto the bulb and turn counter-clockwise out of bulb socket ⑤.
- Press the new bulb gently into bulb socket ⑤ and turn clockwise until it engages.
- Place bulb socket ⑤ back into the lamp and turn it clockwise until it engages.