



P88.40-2240-09

- | | | | | | |
|---|-------------------------|---|---|----|--------------------|
| 1 | Left engine hood catch | 5 | Radiator cross member | 7 | Outer sleeve mount |
| 2 | Right engine hood catch | 6 | Electrical connector (with code (551a) Anti-theft alarm system (ATA)) | 8 | Bolts |
| 3 | Release cable | | | 9 | Nuts |
| 4 | Bolts | | | 10 | Safety hook |

Modification notes

28.1.04	Disconnect/connect ground line on battery		
---------	---	--	--

	Remove/Install		
⚠ Danger!	Risk of injury to fingers being jammed or pinched when Remove/install or aligning hoods, doors, trunk lid/tailgate or sliding roof.	When moving components, ensure that no body parts or limbs are within the operating range of moving parts.	AS00.00-Z-0011-01A
1	Open engine hood	See Operating Instructions	
2	Unhook release cable (3) from left engine hood catch (1)		
3	Unscrew bolts (4) and remove left engine hood catch (1) from radiator cross member (5) upward		*BA88.40-P-1003-01A
4.1	Disconnect electrical connector (6) from right engine hood catch (2)	On vehicles with code (551a) Anti-theft alarm (ATA)	
5	Unclip outer sleeve mount (7) from release cable (3) on right engine hood catch (2)		
6	Unscrew bolts (8) and remove right engine hood catch (2) from radiator cross member (5) upward		*BA88.40-P-1003-01A
7	Unhook release cable (3) from right engine hood catch (2) and remove right engine hood catch (2)		
8	Unscrew nuts (9) and remove retaining hook (10)		*BA88.40-P-1009-01A
9	Install in the reverse order		

Engine hood

Number	Designation	Model 211
BA88.40-P-1003-01A	Bolt to engine hood catch	Nm 8

BA88.40-P-1009-01A	Bolt, safety hook to engine hood	Nm 8
--------------------	----------------------------------	------