

- 1 Switch on ignition.
i The operating system's default display appears in the multifunction display.

Shown on model 211



P00.20-2030-01


- 2 Press one of the steering wheel buttons or until the service date is displayed in the multifunction display.



P00.20-2040-01

- 3 Press the reset button (1) briefly 3 times.
i The SERVICE MENU (2) is displayed in the multifunction display.

1 *Resetting button*

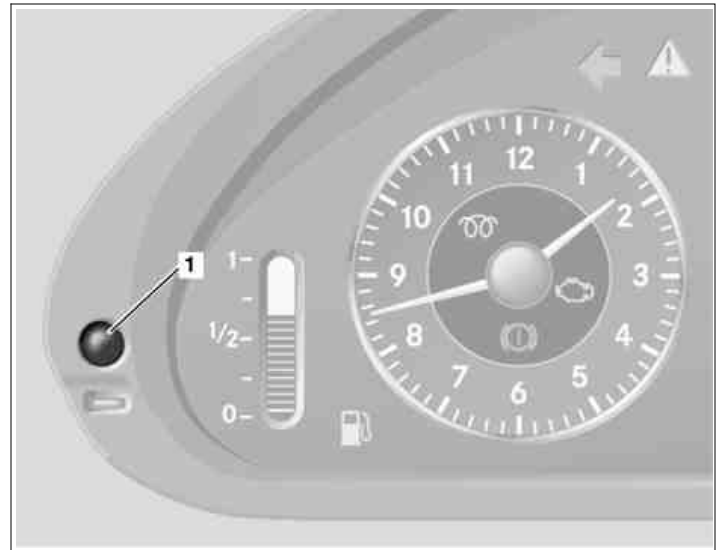




P54.30-7384-11

- 4 Select the SERVICE DATA (3) submenu using buttons + or - on the steering wheel.


2 *Service menu*
 3 *SERVICE DATA*





P54.30-9238-10

- 5 Press the  (scroll forward) button on the steering wheel.
 The multi-digit workshop code (4) is highlighted.
- 6 Note workshop code (4).
 The workshop code (4) is needed for dynamic maintenance (ASSYST PLUS) in the WIS.

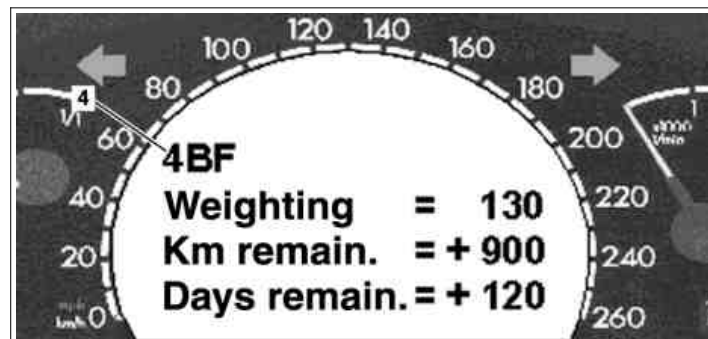4 *Workshop code*



P54.30-9242-10

- 7 Press button  (scroll back) on steering wheel.
 The SERVICE MENU (2) is displayed again.

- 8 Switch off ignition.