


SAS Central Reservoir

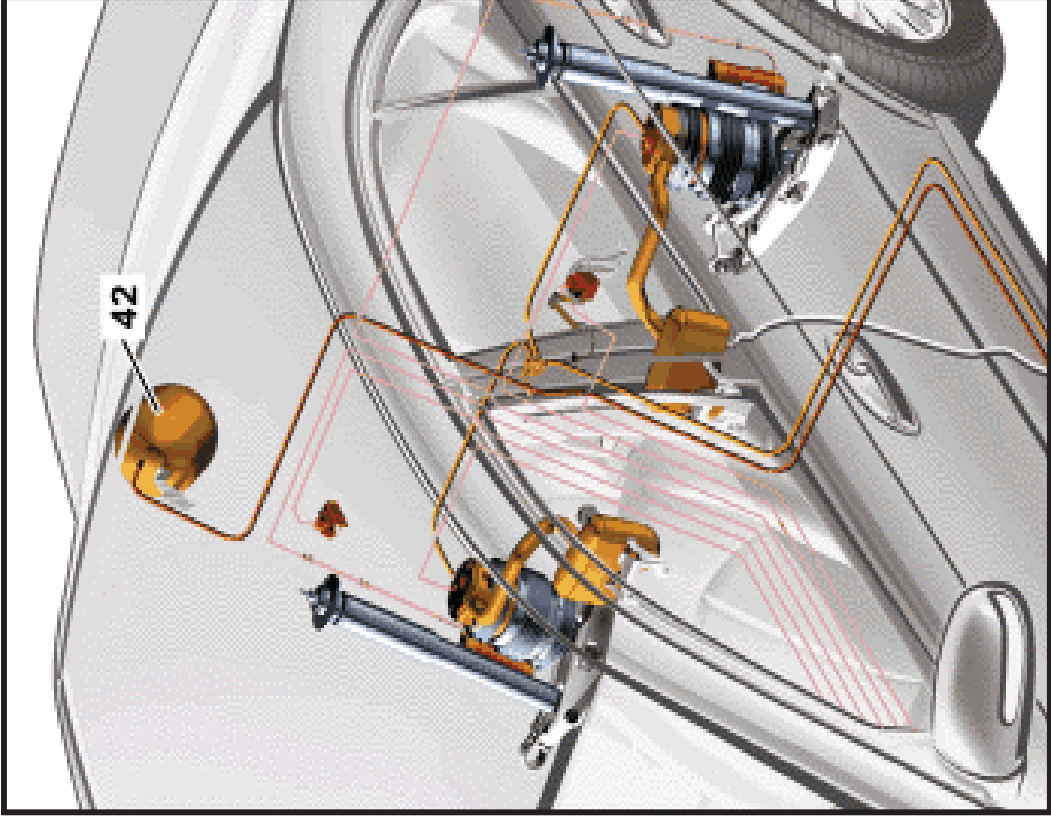


- Stores compressed air
- Reduces compressor cycling
- Supplies air during key off operations

Location: Trunk right side

Central Reservoir Charge Valve (Y36/6)

Y36/6 - Central reservoir charge valve

B7 - Central pressure sensor

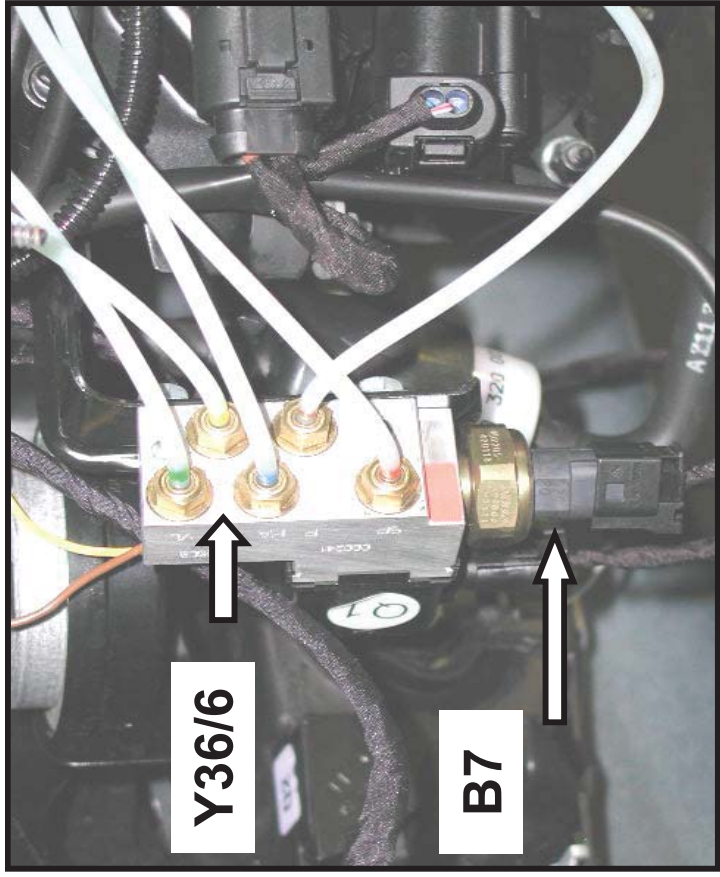

Location: Under left front headlamp