

Controls in detail

Seats

Installing rear seat head restraints

- 1 When installing the head restraints, make sure that:
 - you place the correct head restraint on the middle seat. It is marked with the letter "M" on the outside of the metal bars.
 - the head restraints engage fully.

Lumbar support

The curvature of the front seats can be adjusted to help enhance lower back support and seating comfort.



- 1 Adjustment lever

- ▶ Move adjustment lever 1 in direction of the arrows until you have reached a comfortable seating position.

Multicontour seat*

The multicontour seat has a movable seat cushion and inflatable air cushions built into the backrest to provide additional lumbar and side support.

The seat cushion movement, backrest cushion height and curvature can be continuously varied with switches on the right side of the seat on the driver side, or the left side of the seat on the passenger side.



- 1 Backrest side bolster
 - 2 Backrest center
 - 3 Backrest bottom
 - 4 Seat cushion depth
- ▶ Switch on the ignition (▷ page 37).

Seat cushion depth

- ▶ Adjust the seat cushion depth to the length of your upper leg using switch 4.

Backrest contour

- ▶ Adjust the contour of the backrest to the desired position using **+** or **-**.
▶  