



P88.50-2298-09

- | | | | | | |
|---|-----------------------|----|----------------------|----|-----------------------------------|
| 1 | Trunk lid lock | 6 | Bowden cable | 11 | Rear end center assembly paneling |
| 2 | Bolts | 7 | Gasket | 12 | Bolts |
| 3 | Lock actuation | 8 | Bolts | 13 | Striker eye |
| 4 | Trunk lid | 9 | Electrical connector | 14 | Trunk lid lock |
| 5 | Electrical connectors | 10 | Striker eye cover | | |

	Remove/Install		
Danger!	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	When moving components, ensure that no body parts or limbs are within the operating range of moving parts.	AS00.00-Z-0011-01A
1	Remove outer paneling on trunk lid (4)	Installation: Install paneling after trunk lid lock (1) is adjusted On vehicles up to 27.11.02 On vehicles as of 28.11.02	AR88.50-P-5080T AR88.50-P-5080TA
2	Unscrew bolts (2)		*BA88.50-P-1016-01A
3	Remove lock actuation (3) from trunk lid (4) until electrical connectors (5) are accessible		
4	Disconnect electrical connectors (5) from lock actuation (3)		
5	Unhook control cable (6) from lock actuation (3) and remove lock actuation (3)		
6.1	Remove right and left trunk lid auxiliary lock	Only on vehicles with code (884) Trunk lid auxiliary lock Installation: Tighten bolts for trunk lid auxiliary lock after adjusting trunk lid lock (1)	AR88.50-P-5022T
7	Remove gasket (7)		
8	Remove bolts (8)	Installation: Tighten bolts (8) after adjusting trunk lid lock (1)	
9	Disconnect electrical connector (9)		
10.1	Remove trunk lid lock (1) from trunk lid (4)	On vehicles without code (884) Trunk lid auxiliary lock	
10.2	Separate trunk lid lock (1) from shift rod for second trunk lid auxiliary lock and remove from trunk lid (4)	On vehicles with code (884) Trunk lid auxiliary lock	
11.1	Unclip striker eye cover (10) from rear center section paneling (11)	On vehicles without code (884) Trunk lid auxiliary lock Installation: Install striker eye cover (10) after adjusting trunk lid (4)	
11.2	Remove auxiliary striker eyes	On vehicles with code (884) Trunk lid auxiliary lock	AR88.50-P-5023T

12	Unscrew bolts (12) and remove striker eye (13) from rear center section	i Installation: Bolts (12) are tightened when adjusting trunk lid (4)	
13	Install in the reverse order		
14	Check whether trunk lid lock (1) can be locked or unlocked.	i Lock trunk lid lock (14) with screwdriver, then unlock trunk lid lock (1) manually via lock actuation (3)	
	Adjust		
15.1	Loosen bolts (8), align trunk lid lock (1) in center in relation to recess in trunk lid (4) and tighten bolts (8)	On vehicles without code (884) Trunk lid auxiliary lock Nm	*BA88.50-P-1005-01A
15.2	Loosen bolts (8) and bolts for trunk lid auxiliary locks, align trunk lid lock (1) together with trunk lid auxiliary locks in center in relation to recess in trunk lid (4) and tighten bolts (8) and bolts for trunk lid auxiliary locks.	On vehicles with code (884) Trunk lid auxiliary lock Nm Nm	*BA88.50-P-1005-01A *BA88.50-P-1013-01A
16	Adjust height of trunk lid (4)	On vehicles without code (884) Trunk lid auxiliary lock On vehicles with code (884) Trunk lid auxiliary lock	AR88.50-P-5200T AR88.50-P-5200TA

Nm Trunk lid

Number	Designation	Model 211
BA88.50-P-1005-01A	Bolt, trunk lid lock to trunk lid Nm	9
BA88.50-P-1013-01A	Bolt, trunk lid additional lock to trunk lid Nm	9
BA88.50-P-1016-01A	Bolt, handle plate to trunk lid Nm	9