



Mute


- ▶ **To switch on/off:** Press the  button. The sound from the active audio or video source is switched on or muted.


i When the sound is muted, you will see the  icon in the status bar.

 
If you change the audio or video source or change the volume, the sound is automatically switched on again.

i Announcements from the navigation system can still be heard with the sound switched off.


 
 
Switching Navigation Announcements On/Off

- ▶ Press  during the announcement.

The navigation announcements are switched on again if you start a new route guidance or if COMAND is switched off and on with the  button.

i The navigation announcements can also be switched back on by selecting the softkey  in the navigation menu.


Setting the Volume

- ▶ **To set:** Turn the  rotary/push button.
- or
- ▶ Press the  or  button on the multi-function steering wheel. The volume of the selected audio or video source changes.

 
 
Volume of Navigation Announcements

You can set the volume for navigation announcements independently of the volume for the active audio or video source.

During a navigation announcement:

- ▶ Turn the  rotary/push button.


or

- ▶ Press the  or  button on the multi-function steering wheel.

 
 
Setting Volume for Phone Calls

You can adjust the volume for hands-free mode during a telephone call.

During a telephone call:

- ▶ Turn the  rotary/push button.

or

- ▶ Press the  or  button on the multi-function steering wheel.

Sound Settings

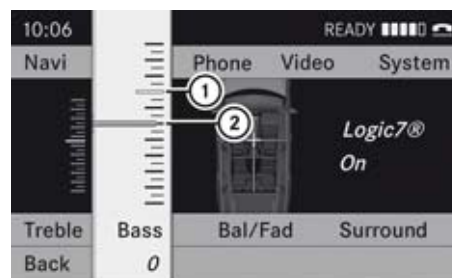 
You can select different sound settings for each audio and video source. The sound menu can be opened from the submenu of the desired operating mode.

Examples:

- Audio → FM/AM Radio → Sound
- Audio → Disc → Sound

Setting Bass and Treble

- ▶ Select Sound → Treble or Bass. The previously selected setting is indicated by an empty bar.



P82.86-9963-31

Setting treble and bass

- ① Last selected setting
- ② Current setting