GF54.15-P-1257-04T	Relay assignment of fuse and relay box in	⊯ GF
	trunk	


Assignment of fuse and relay box in luggage compartment

f1 to f20 Fuses

N10/2 Rear SAM control unit with fuse and relay module

A to H Relays

X Direction of travel

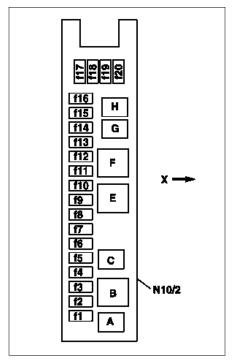

P54.15-2416-03

Relays	Designation	
A	Fuel pump relay (N10/2kA) except engine 113.990 (E 55 AMG)	
	Charge air cooler circulation pump relay (N10/2kA) only engine 113.990 (E 55 AMG)	
W	Relay 2, terminal 15R (N10/2kB)	
CC	Spare relay 2 (N10/2kC)	
D	Rear wiper relay (N10/2kD)	
E	Heated rear window relay (N10/2kE)	
FF	Relay 1, terminal 15R (N10/2kF)	
G	Fuel filler cap polarity reverser relay 1 (N10/2kG)	
Н	Fuel filler cap polarity reverser relay 2 (N10/2kH)	