

P82.35-2170-07

 
1 Windshield washer nozzle
2 Expanding clip
3 Cover

4 Insulation mat
5 Electrical connector

6 Water hose
7 Ventilation grille

Modification notes

15.1.04	Disconnect/connect/remove ground lead from battery		
---------	--	--	--

	Remove/Install		
1	Open engine hood and raise to vertical position		AR88.40-P-1000T
2	Fold back insulation mat (4) in region of cover (3)		
3	Remove spreader clips (2) and unclip cover (3) from engine hood		
4	Disconnect electrical connector (5) from left or right windshield washer nozzle (1)		
5	Detach water hose (6) from left or right windshield washer nozzle (1)		
6	Unclip left or right windshield washer nozzle (1) from ventilation grille (7) and remove		
7	Install in the reverse order		
8	Check settings of left and right windshield washer nozzle (1) of windshield washer system and correct if necessary Check setting of windshield washer system spray nozzles		AP82.35-P-8252-01T