


MODEL 211.0 /2 /6 as of 1.6.06 with CODE (500) Folding left/right outside mirrors

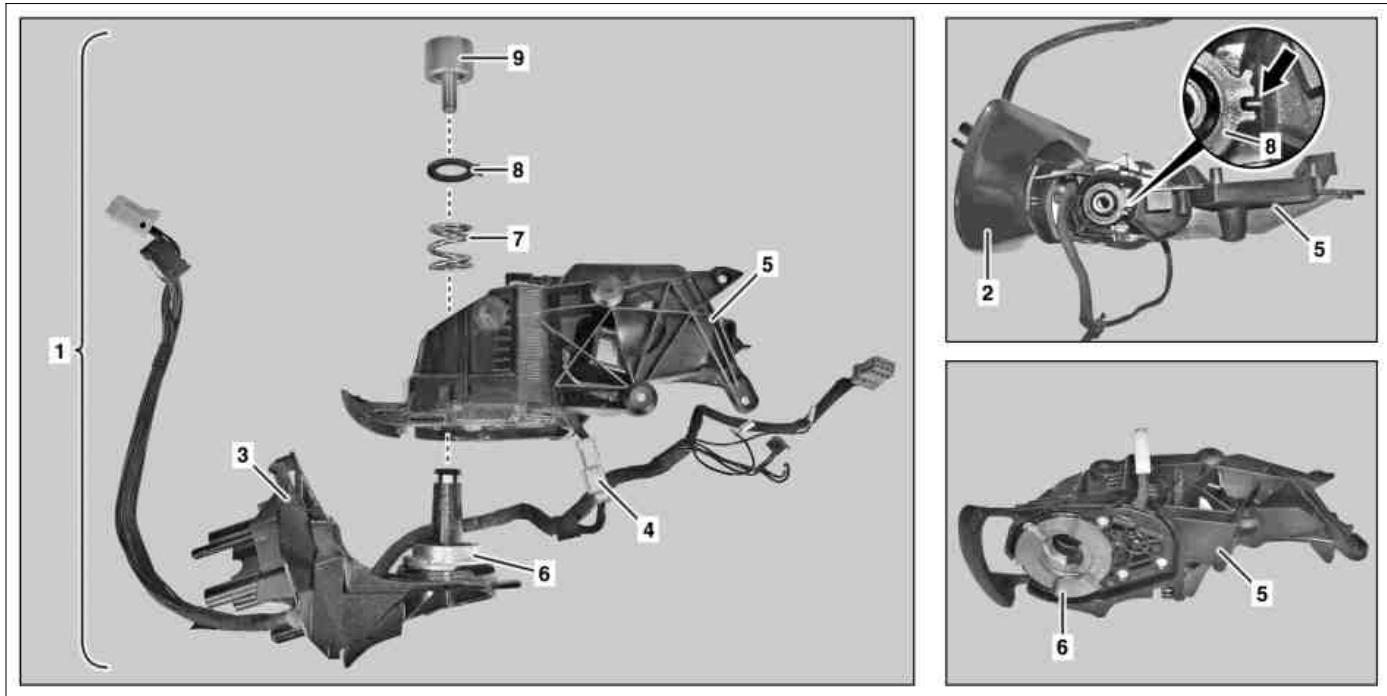

P88.70-2404-09

Shown on left outside mirror

- | | | | | | |
|---|--|---|----------------------|---|--------------------|
| 1 | Basic rear mirror with fold-back motor | 4 | Electrical connector | 7 | Compression spring |
| 2 | Mirror triangle paneling | 5 | Mirror arm | 8 | Washer |
| 3 | Mirror base | 6 | Setting dial | 9 | Adjusting screw |

	Remove		
i	It is not possible to disassemble the factory-installed basic rear mirror with fold-back motor (1). Therefore it can only be replaced in combination with a new mirror triangle paneling (2). If the basic rear mirror with fold-back motor (1) or the mirror triangle paneling (2) has already been replaced, the basic rear mirror with fold-back motor (1) can be disassembled.		
1	Remove outside mirror completely		AR88.70-P-9000TM
2	Remove outside mirror covering		AR88.70-P-9040TM
x	Install		
3	Clip new mirror triangle paneling (2) to mirror base (2) of new basic rear mirror with fold-back motor (1)		
4	Connect electrical connector (4) for mirror fold-in motor.	i The mirror fold-in motor is integrated into the mirror arm (5).	
5	Install mirror arm (5) on mirror base (3). Ensure that setting dial (6) is seated correctly.		
6	Insert compression spring (7) and washer (8) into basic rear mirror with fold-back motor (1)	i Observe installation position (arrow) of washer (8).	
7	Tighten adjusting screw (9).	w If the basic rear mirror with fold-back motor (1) is assembled a second time, replace self-locking adjusting screw (9). Otherwise, the strength of the screwed connection is not ensured.	
8	Install outside mirror paneling		AR88.70-P-9040TM
9	Completely install outside mirror		AR88.70-P-9000TM