


MODEL 211.0 /2 /6 as of 1.6.06

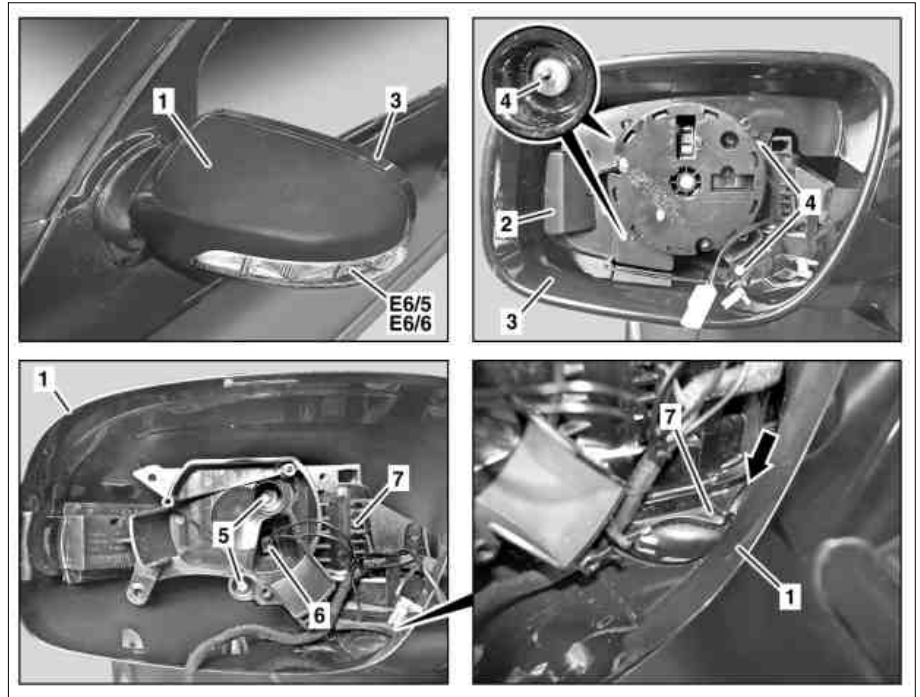

Shown on left outside mirror

- 1 Outside mirror paneling
- 2 Cover
- 3 Frame
- 4 Bolts
- 5 Bolts
- 6 Electrical connector
- 7 Mirror arm

- E6/5 Left outside mirror turn signal lamp
- E6/6 Right outside mirror turn signal lamp



P88.70-2402-06

|   | Remove/install | | |
|--|--|--|------------------|
| 1 | Remove mirror glass | | AR88.70-P-9020TX |
| 2 | Remove cover (2). | <p>i Cover (2) is damaged during removal and must be replaced.</p> <p>i Installation: Clean adhesive surfaces for cover (2) on frame (3).</p> | |
| 3 | Unscrew bolts (4) and remove frame (3) from outside mirror paneling (1). | | |
| 4 | Remove glass adjustment drive | | AR88.70-P-9060R |
| 5 | Remove bolts (5) | | |
| 6 | Disconnect electrical connector (6) | | |
| 7 | Loosen catch (arrow) on mirror arm (7), guide outside mirror paneling (1) over mirror arm (7) and remove. | | |
| 8 | Remove left outside mirror turn signal lamp (E6/5) or right outside mirror turn signal lamp (E6/6) from outside mirror cover (1) | | |
| 9 | Install in the reverse order | | |