


MODEL 211.0 except CODE (287a) Through-loading feature

- 1 Head restraints
- 2 Orifices
- 3 Rear shelf
- 4 Release lever
- 5 Head restraint mechanism
- 6 Punch \varnothing 8 mm

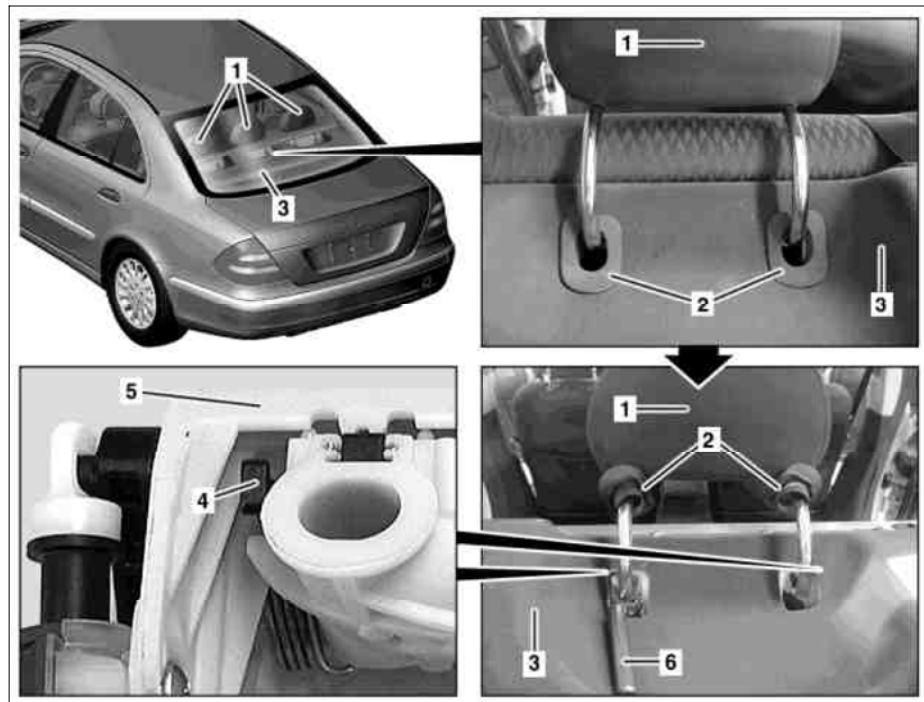

P91.16-2138-06

	Remove		
1	Put up relevant head restraint (1) manually		
2	Unclip orifices (2) from rear shelf (3)	Note correct installation positions.	
3	Operate release levers (4) at both sides with punch \varnothing 8 mm (6)		
4	Pull head restraint (1) out of head restraint mechanism (5)		
	Install		
5	Insert head restraint (1) into head restraint mechanism (5) until head restraint (1) engages		
6	Install orifices(2)	Note correct installation positions.	
7	Perform function check of head restraint tilting	See Operating Instructions	