



P68.50-2254-09

1 Screw

4 Plug-in wiring plug connection

M50 Load compartment cover motor

2 Drive for load compartment cover

5 Nuts

3 Drive shaft

	Remove/Install		
1	Remove headliner	Do not remove left side paneling in rear. Lay headliner down on front and rear seats together with connected wiring harnesses pointing away from the headliner in the area of the left C-pillar.	AR68.30-P-4300TD
2	Unscrew screw (1) from left and right load compartment cover drive (2)		*BA68.50-P-1001-04A
3	Remove left and right drive shaft (3) from body	Installation: Replace tie straps.	
4	Disconnect electrical connector (4)		
5	Unscrew nuts (5) and remove load compartment cover motor (M50) together with drive shafts (3)		
6	Install in the reverse order		

Load compartment cover

Number	Designation	Model 211.2
BA68.50-P-1001-04A	Screw, load compartment cover drive to D-pillar	NM 6