


Illustrated on right side of vehicle

- 1 Guide rail
- 2 Lower trim panel
- 3 Bolts
- 4 Drive
- 5 Upper trim panel
- 6 Guide tube

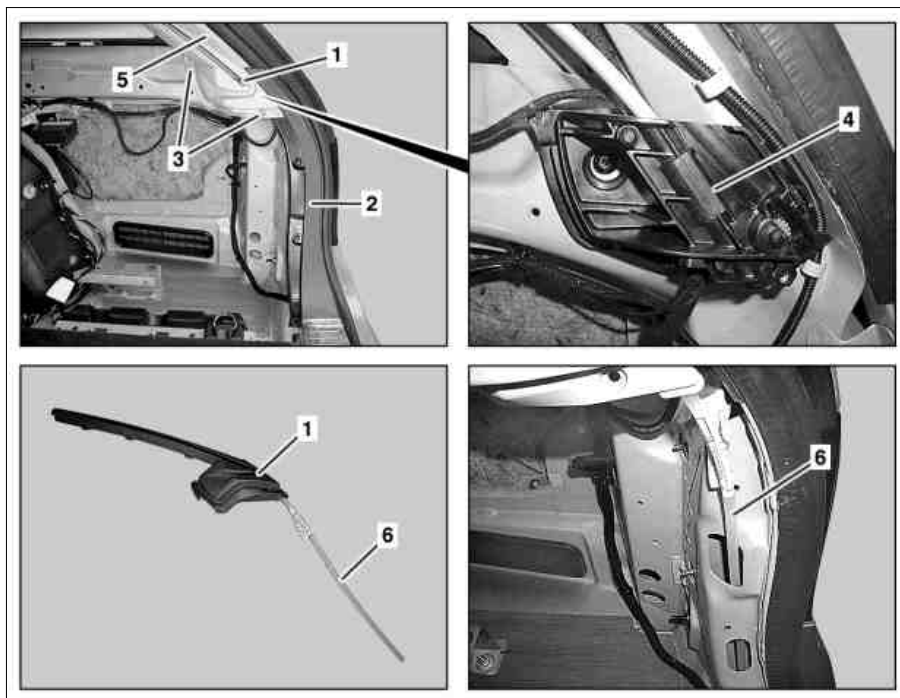

P68.30-2734-06

	Remove/Install		
1	Unhook load compartment cover	See Operating Instructions	
2	Remove left and right bottom paneling (2) from D-pillar		AR68.30-P-4496T
3	Remove screws (3)		*BA68.50-P-1003-04A
4	Unclip guide rail (1) from drive (4)	Installation: Ensure that guide rail (1) is seated properly on drive (4)	
5	Pull guide rail (1) out of upper paneling (5) downward		
6	Pull guide rail (1) out of D-pillar upward together with guide tube (6) and remove	Installation: Ensure that guide tube (6) does not break off, otherwise guide rail (1) does not operate properly	
7	Install in the reverse order		

Load compartment cover

Number	Designation	Model 211.2
BA68.50-P-1003-04A	Screw, guide of load compartment cover to drive	Nm 2.5