


B22/9 Right front level sensor


Location mirror image:

B22/8 Left front level sensor

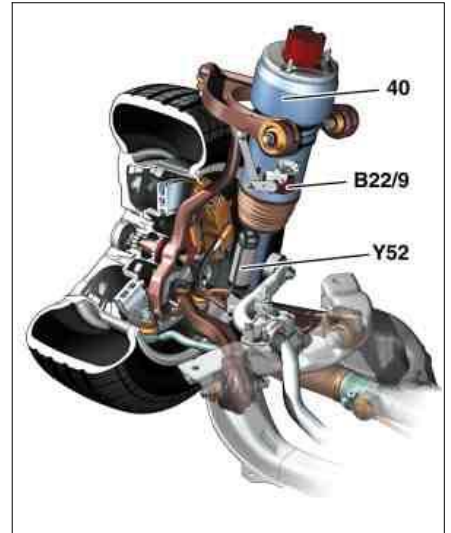

P32.22-2124-72

B22/3 Rear axle level sensor

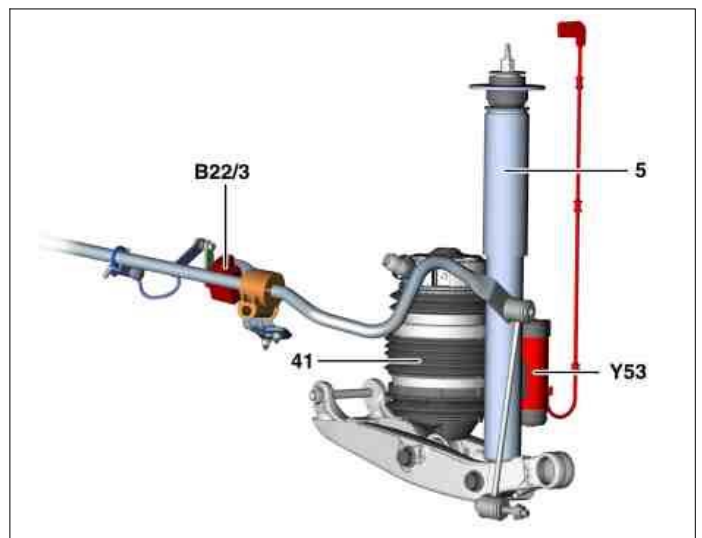

P32.22-2125-81