

Model 211.0 /2

Locations

K57/2 Auxiliary battery relay



P54.10-2175-11

	Auxiliary battery relay, location	The auxiliary battery relay (K57/2) is located on the partition wall towards the passenger compartment in the vicinity of the auxiliary battery (G1/7).	
	Auxiliary battery relay, task	The auxiliary battery relay (K57/2) isolates the battery (G1) from the auxiliary battery (G1/7). If necessary and to charge the auxiliary battery (G1/7) the auxiliary battery relay (K57/2) switches the two batteries in parallel	