GF54.15-P-1257-03TM	Relay assignment of fuse and relay box in	⊯ GF
	left side of engine compartment	

Driver-side fuse and relay module


f43 to f67 Fuses

I to S Relays

Χ Direction of travel

Driver-side SAM control unit with fuse and relay module N10/1

The relay S (AIRmatic relay (K67)) is only clipped onto the driver-side SAM control unit with fuse and relay module.

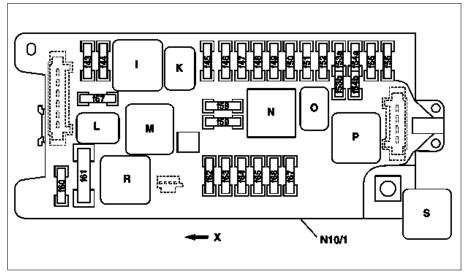

P54.15-2832-05

Relays	elays Designation	
I	Terminal 87 relay, engine (N10/1kl)	
K	Terminal 87 relay, chassis (N10/1kK)	
LL	Starter relay (N10/1kL)	
М	-	
N	Terminal 15 relay (N10/1kN)	
0	Fanfare horn relay (N10/1kO)	
PPP	Terminal 15R relay (N10/1kP)	
R	Air pump relay (N10/1kR) except engine 156.983 (E 63 AMG) or	
	Oil cooler fan (N10/1kR) only engine	
	156.983 (E 63 AMG)	
S	Airmatic relay (K67) only with code (489) Airmatic (semi-active air suspension)	