


P68.30-2775-09

Shown on left side of vehicle

- 1 Side trim
- 2 Door sill molding
- 3 Expansion clip
- 4 Floor mat
- 5 Nut
- 6 Edge guard
- 7 Stop
- 8 Locking eye
- 9 Bolts
- 11 Cover
- X58/4 Load compartment socket

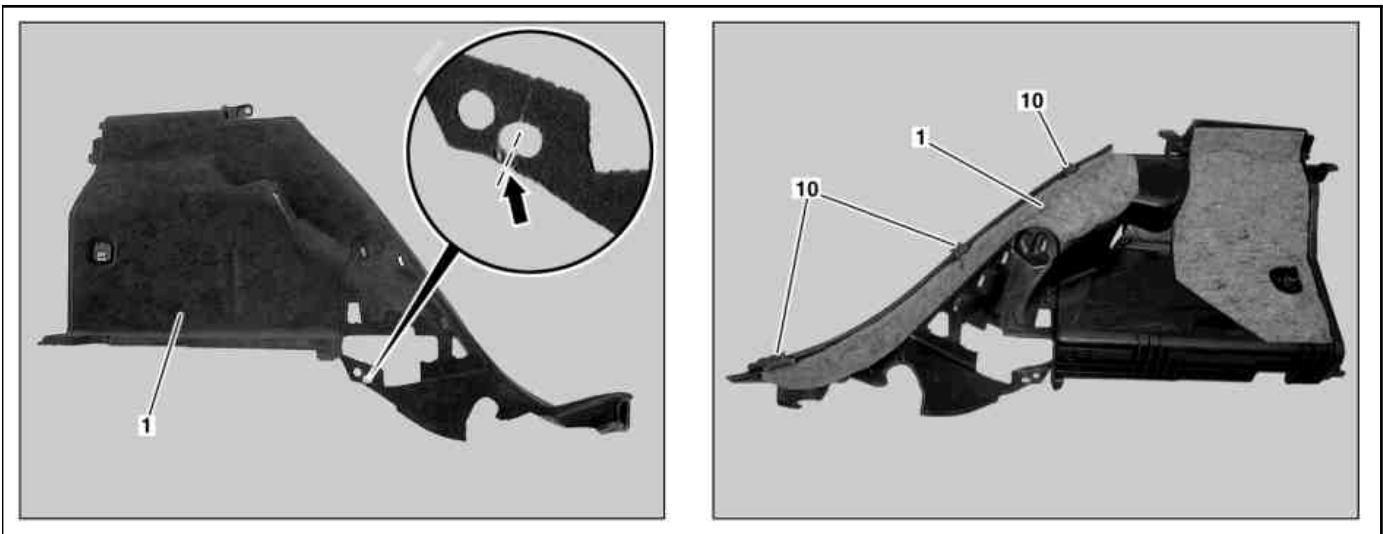

P68.30-2776-08


 

Shown on left side trim panel


- 1 Load compartment side trim panel
- 10 Retaining clips

Modification notes

8.1.04	Disconnect/connect/remove ground lead from battery	
--------	--	--

	Remove/Install		
1	Remove left and right rear seat cushions		AR91.12-P-1020TB
2	Fold down left and right rear seat backrest	<b>i</b> See operator's manual.	
3	Unclip left and right cover (1) from load compartment side trim panel (1) with mounting wedge	<b>S</b>	*110589035900

4	Cut stay on load compartment side trim panel (1) at cutting point (arrow) with sharp knife		
5	Remove left and right load compartment side trim panel (1)		AR68.30-P-1180T
6	Remove left and right trim from C-pillar		AR68.30-P-4490TA
7	Unclip door sill molding (2) from rear entrance with mounting wedge		*110589035900
8	Remove expansion clip (3).		
9	Fold back floor covering (4) until nut (5) is accessible		
10	Unscrew nut (5)		
11	Remove edge guard (6) in area of load compartment side trim panel (1)		
12	Remove stop (7) from locking eye (8)		
13	Remove bolts (9)		
14	Unclip load compartment side trim panel (1) at retaining clips (10) from C-pillar with mounting wedge.	 <b>i</b> <b>Installation:</b> Replace damaged retaining clips (10). 	*110589035900
15	Remove load compartment side trim panel (1) until electrical connector of load compartment socket (X58/4) is accessible.		
16	Disconnect electrical connector from load compartment socket (X58/4) and remove load compartment side trim panel (1).		
17	Install in the reverse order		

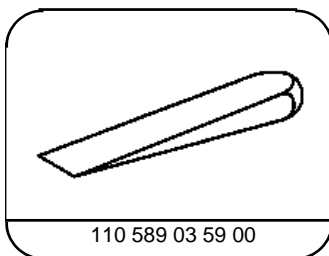

Mounting wedge