



P91.12-2531-07

1 Rear seat cushion
2 Release handle

3 Handle
4 Bracket

5 Guides

☒ ☒	Remove/Install		
1	Pull release handle (2) upwards and place left or right rear seat cushion (1) into vertical position	i Installation: Rear seat cushion (1) must latch into place.	
2	Pull handle (3) on the back of the rear seat cushion (1) and remove	i Installation: Insert bracket (4) of rear seat cushion (1) into the guides (5) at the pivot bearing and latch into place.	
3	Install in the reverse order		