

Park Pawl

Arrangement:


The park pawl gear (1) and the park pawl mechanism are located in the rear part of the transmission housing.

Task:

The proven park pawl mechanism is used to protect the vehicle from rolling, in addition to the parking brake.

Components:

- 1 Park pawl gear
- 2 Output shaft
- 3 Lock pawl
- 4 Rod
- 5 Detent plate
- 6 Range selector lever
- 7 Spring

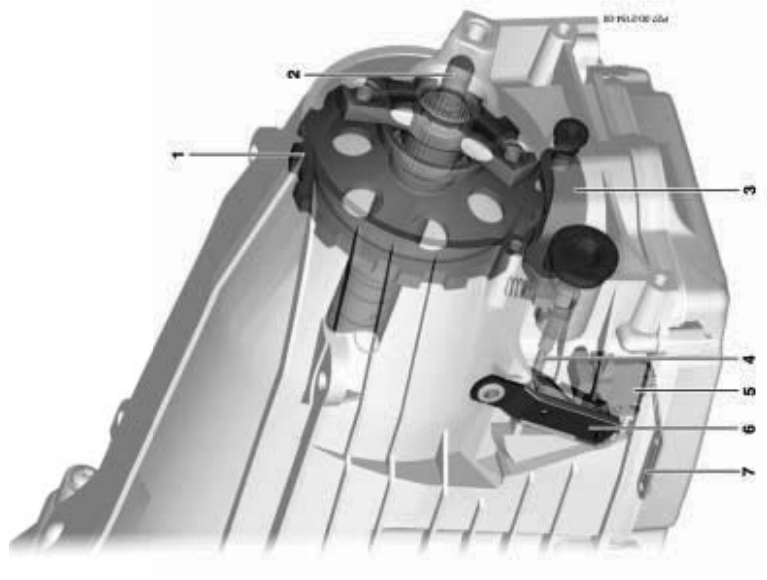

P27.00-2154-00