

AR46.10-P-0300-01T	Activate steering angle sensor		
--------------------	--------------------------------	--	--

i If the battery has been disconnected or the voltage supply to the steering angle sensor has been interrupted, the ESP, SPS [PML] and BAS control unit switches to fault.

The following message appears in the multifunction display "EI.-STAB.-PROGRAM - LOCATE WORKSHOP".

The steering-angle sensor must be re-activated to clear the malfunction.

Activating steering angle sensor

- 1 Start engine and run at idling speed.
- 2 Turn the steering wheel from one lock position to the other, then center it.
The message
"EI.-STAB.-PROGRAM - LOCATE WORKSHOP"
goes out in the multifunction display.