


**Document number :** pe54.65-p-2101-99db

**Document title :** Wiring diagram for Parktronic system (PTS) control unit

**Code: Designation: Position:**

A0	Color code key	31 L
A44/3	Rear PTS warning indicator	13 L
A44/4	PTS warning indicator, center of instrument panel	16 L
B8/1	Outer left front PTS ultrasonic sensor	23 L
B8/10	Outer left rear PTS ultrasonic sensor	8 L
B8/2	Center left front PTS ultrasonic sensor	22 L
B8/3	Inner left front PTS ultrasonic sensor	21 L
B8/4	Inner right front PTS ultrasonic sensor	20 L
B8/5	Center right front PTS ultrasonic sensor	19 L
B8/6	Outer right front PTS ultrasonic sensor	18 L
B8/7	Outer right rear PTS ultrasonic sensor	12 L
B8/8	Inner right rear PTS ultrasonic sensor	10 L
B8/9	Inner left rear PTS ultrasonic sensor	9 L
N10/2	Rear SAM control unit with fuse and relay module	2 L
N62	PTS control unit	4 A
N62	PTS control unit	11 A
N62	PTS control unit	21 A
X25/8	Overhead control panel and FFS [RBA] connector	13 H
X26/27	Front PTS separation point	17 E
X30/7	Left voltage distributor (CAN) connector	5 L
X35/27	PTS, cockpit warning indicator connector	15 H
X35/28	PTS, rear bumper connector	7 E
Z36/1	Rear PTS sensor ground connector sleeve	11 G
Z36/2	Rear PTS sensor voltage supply connector sleeve	9 H
Z36/3	Front PTS sensor ground connector sleeve	19 G
Z36/4	Front PTS sensor voltage supply connector sleeve	22 H

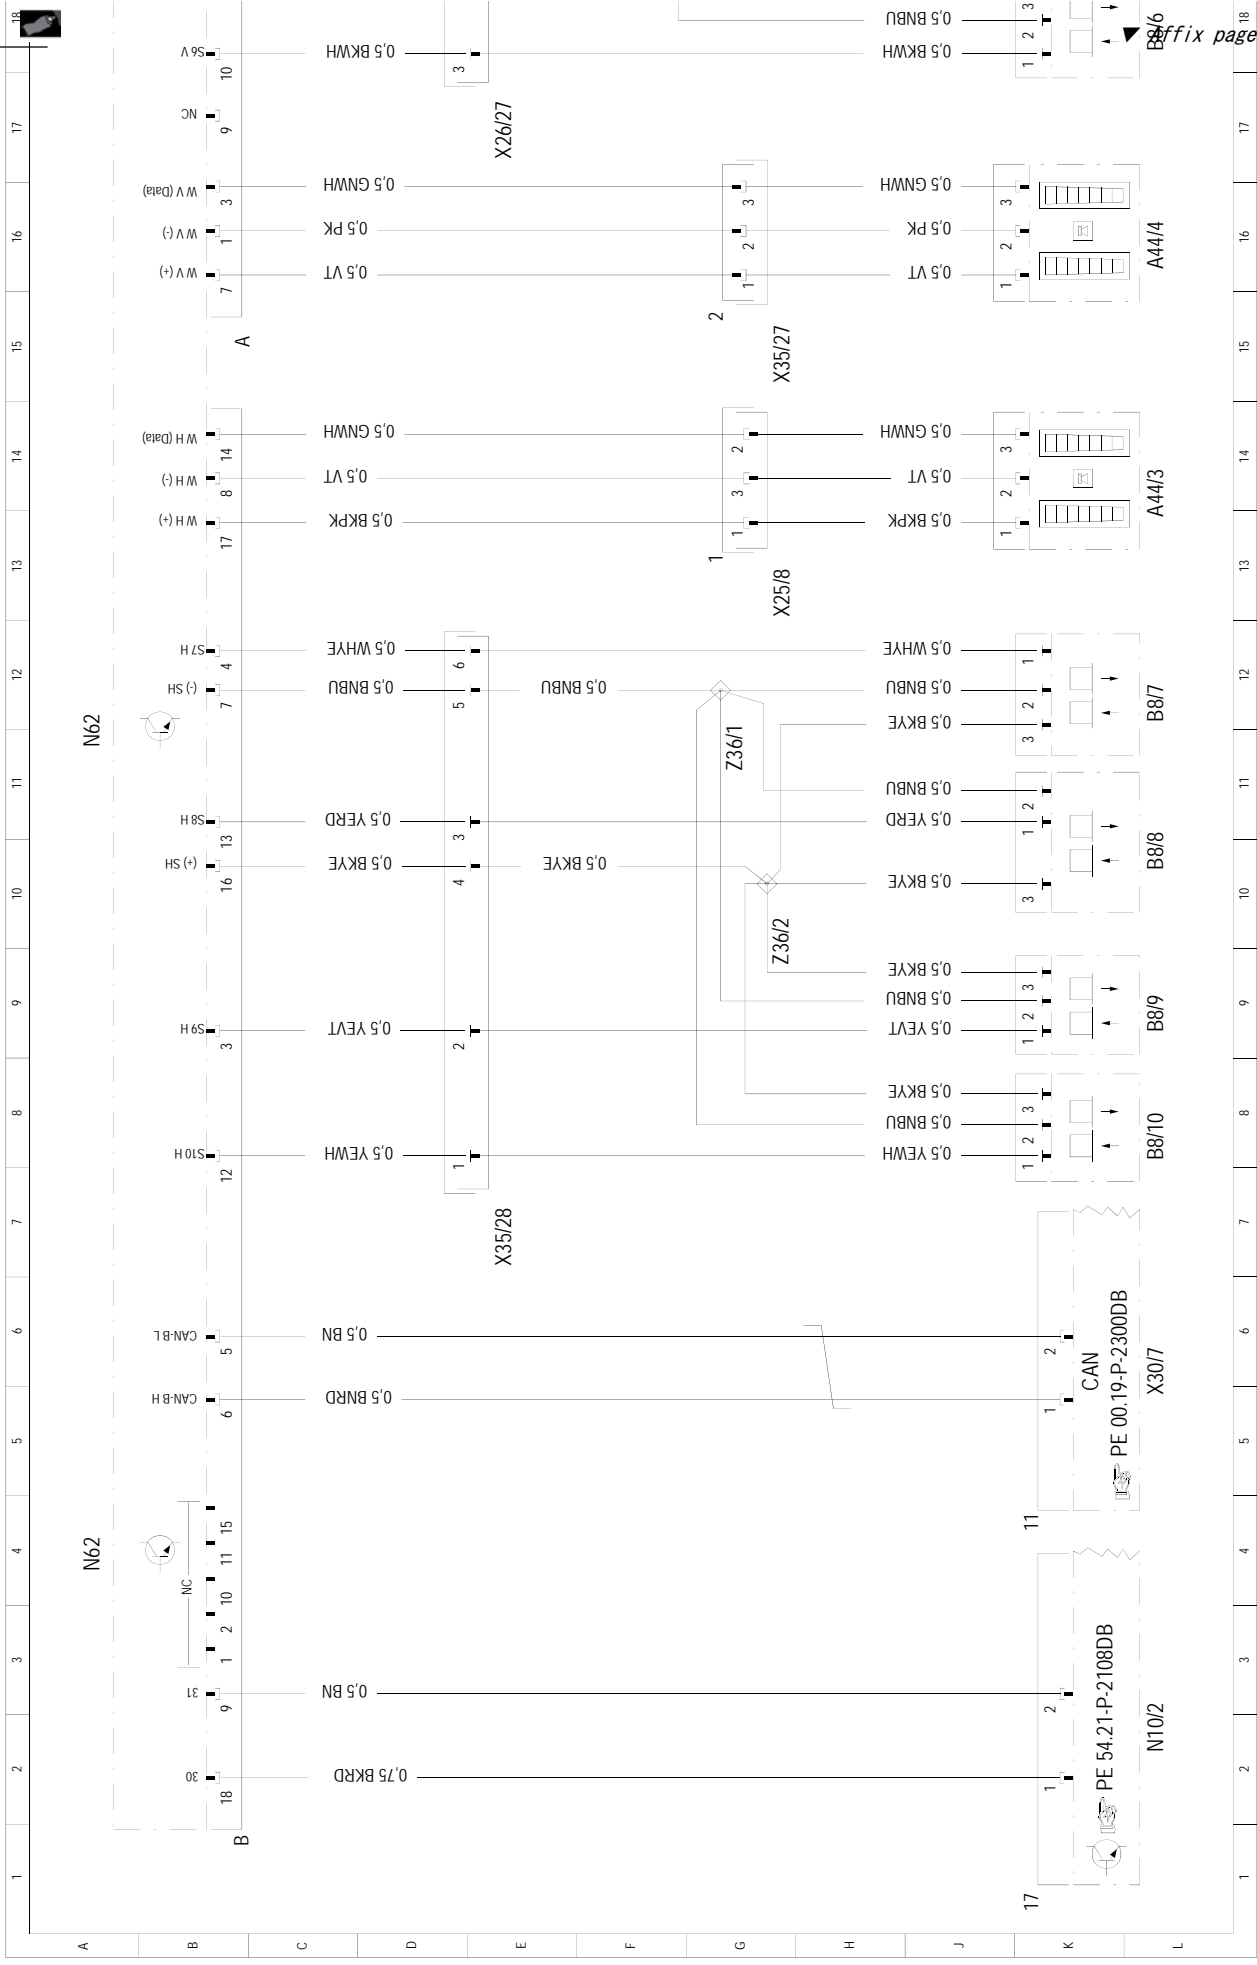

Prefix page 2 here ▼

