
MODEL 211.0/ 2

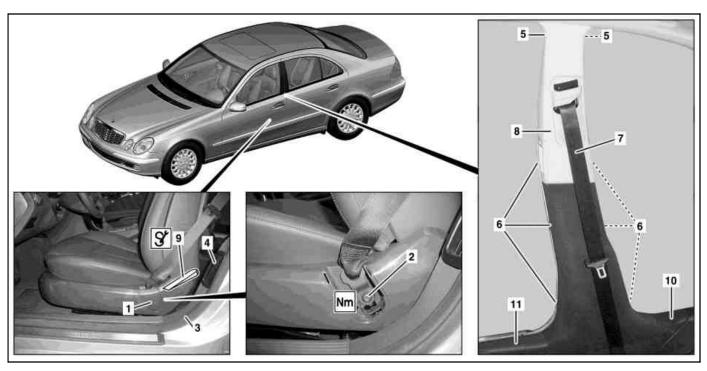


P68.30-2480-09


## Shown on Model 211.0

- 1 Covering
- 2 Bolt
- 3 Edge guard

- 4 Air inlet vent (with code (581b) Comfort automatic air conditioning)
- 5 Clip
- 6 Clips

- 7 Seat belt
- 8 <u>B-pillar trim</u>
- 9 S Mounting wedge
- 10 Front door sill trim
- 11 Rear door sill trim

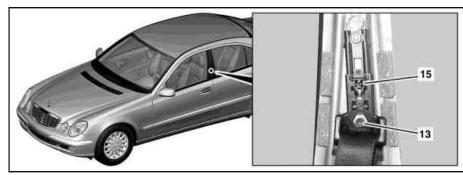

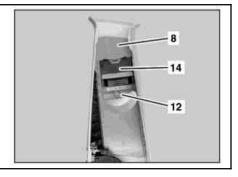

P68.30-2481-07

## Shown on Model 211.0

8 B-pillar trim 13 Pin 15 Lock pawl

12 Mount 14 Button

## **Modification notes**


| 25.7.03 | Step added | Step 17 |  |
|---------|------------|---------|--|

| $\Xi$ | Removal  |  |               |
|-------|--|--|---------------|
| 1     | Move seat forward and raise rear of seat                                     |  |               |
| 2     | Remove cover (1) from front seat with mounting wedge (9)                     | 8  | *110589035900 |
| 3     | Remove bolt (2) and remove belt end fitting                                  |  |               |
| 4     | Remove edge guard (3) in area of B-pillar trim (8) on both sides             |  |               |
| 5.1   | Remove air inlet vent (4) from B-pillar trim (8)                             | automatic air conditioning   |               |
| 6     | Remove front door sill trim (10) and rear door sill trim (11)                | Lift out front door sill trim (10) and rear door sill trim (11) on B-pillar trim (8) side. |               |
| 7     | Press B-pillar trim (8) off of clips (5, 6) on B-pillar with mounting wedge. | 8  | *110589035900 |

| 9    | Remove clips (5) from B-pillar                                 | [3,   | *110589035900       |
|------|--|---|---------------------|
| 10   | Remove clips (6) from B-pillar trim (8)                        |   |                     |
| X    | Installation   |   |                     |
| 11   | Insert clips (6) into B-pillar                                 |   |                     |
| 12   | Insert clips (5) into B-pillar trim (8)                        |   |                     |
| 13   | Move seat belt (7) through B-pillar trim (8)                   |   |                     |
| 14   | Clip B-pillar trim (8) to B-pillar                             | install mount (12) in bolts (13) and button (14) of lock pawl (15). Ensure that clips (5, 6) are seated properly. |                     |
| 15   | Check function of belt height adjustment on B pillar           | ilt should be possible to adjust and arrest the belt height adjustment.   |                     |
| 16   | Install front door sill trim (10) and rear door sil trim (11)  |   |                     |
| 17.1 | Install air inlet vent (4) in combination with B-pillar (8)    | On vehicles with code (581b) Comfort automatic air conditioning   |                     |
| 18   | Install edge guard (3) on both sides of B-pillar               |   |                     |
| 19   | Insert belt end fitting and fasten with bolt (2) to front seat | <b>№</b>  | *BA91.40-P-1001-01A |
| 20   | Install cover (1)  |   |                     |

## Nm Seat belts/emergency tensioning retractors

| Number             | Designation                 | Model<br>211 |
|--------------------|-----------------------------|--------------|
| BA91.40-P-1001-01A | Bolt at belt end fitting Nm | 32           |

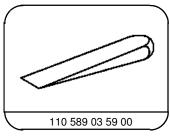

Mounting wedge