


MODEL 211.0 with CODE (220) Parktronic system (PTS)

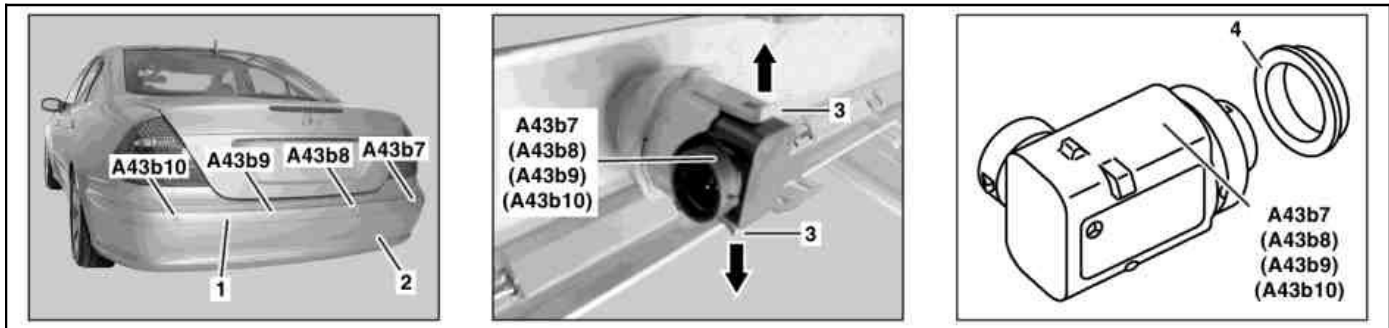


P54.65-2456-07

Shown on vehicle up to 31.5.06, right outer sensor, rear bumper

- | | | |
|--------------------|---------------------------------------|--------------------------|
| 1 Protective strip | A43b7 Right outer sensor, rear bumper | A43b9 Left inner sensor |
| 2 Rear bumper | A43b8 Right inner sensor | A43b10 Left outer sensor |
| 3 Lock | | |
| 4 Sealing ring | | |

Shown on vehicle as of 1.6.06

- | | |
|------------------------|--|
| 2 Rear bumper | |
| 5 Electrical connector | |
-
- | |
|---------------------------------------|
| A43b7 Right outer sensor, rear bumper |
| A43b8 Right inner sensor |
| A43b9 Left inner sensor |
| A43b10 Left outer sensor |

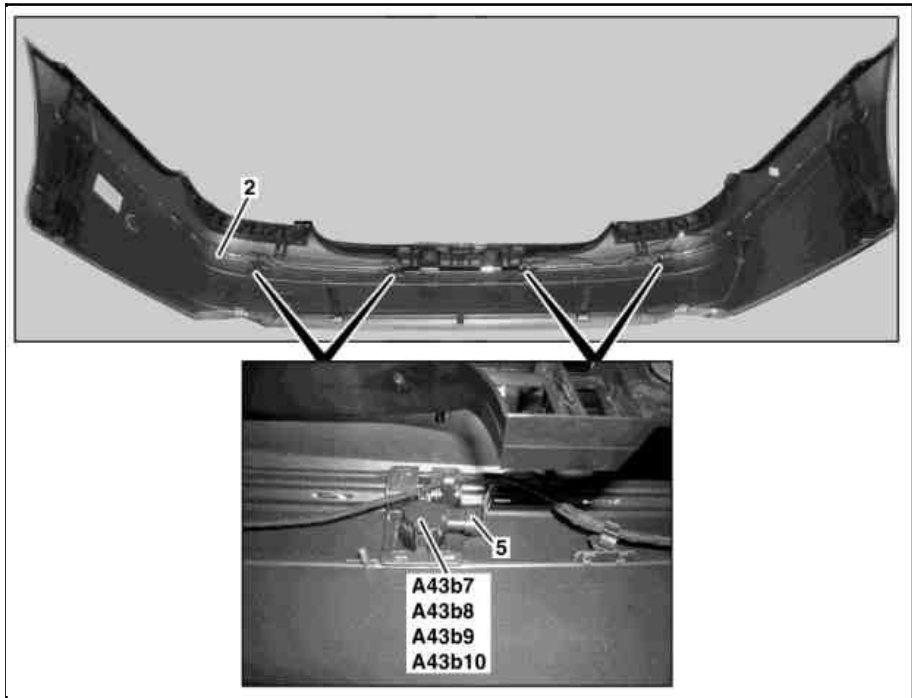


P54.65-3158-06

Modification notes

8.1.04	Disconnect/connect ground line on battery	
--------	---	--

	Remove/install		
1.1	Remove ram strip (1) from rear bumper (2)	On vehicles up to 31.5.06	AR88.80-P-2220TA
1.2	Remove rear bumper (2)	In vehicles as of 1.6.06	AR88.20-P-2200T
2.1	Disconnect electrical connector (5) at the corresponding sensor (A43b7, A43b8, A43b9 or A43b10)	In vehicles as of 1.6.06	
3.1	Unlock the locks (3) with the release tool in the direction of the arrow and remove sensor (A43b7, A43b8, A43b9, , or A43b10) from the protective strip (1)	On vehicles up to 31.5.06	*168589023100
3.2	Unclip sensor (A43b7, A43b8, A43b9 or A43b10) by hand from the rear bumper (2) and remove	In vehicles as of 1.6.06	
4	Install in the reverse order		

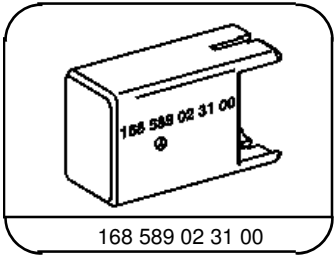

168 589 02 31 00

Unlocking tool