

P82.35-2253-09

Illustrated on vehicle with code (600a) headlamp cleaning system

- | | | |
|--|---|--|
| <p>1 Electrical connectors</p> <p>2 Electrical connector (with code (600a) headlamp cleaning system)</p> | <p>3 Washer fluid hose</p> <p>4 Washer fluid hose</p> <p>5 Bracket</p> <p>6 Washing water reservoir</p> <p>7 Gasket</p> <p>8 Electrical connector</p> | <p>M5/1 Windshield washer fluid pump</p> <p>M5/2 HCS pump (with code (600a) headlamp cleaning system)</p> <p>M5/3 Rear-end door washer fluid pump (in model 211.2)</p> |
|--|---|--|

Modification notes


14.1.04	Disconnect/connect/remove ground lead from battery		
---------	--	--	--

	Remove/Install		
	Danger!	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between the columns of the hydraulic hoist and position the four support plates below the hoist support points specified by the vehicle manufacturer.
1	Lift vehicle on lifting platform.		AS00.00-Z-0010-01A
2	Detach right front road wheel		*BA40.10-P-1001-01A
3	Remove liner from right front fender	See: ↓ Remove/install inner fender in front fender	AR88.10-P-1300T
4	Disconnect electrical connectors (1).		
5.1	Disconnect electrical connector (2) on HCS pump (M5/2)	On vehicles with code (600a) headlamp cleaning system	
6.1	Detach washer fluid hose (3) from window washer fluid pump (M5/1)	When removing windshield washer fluid pump (M5/1). Collect washer fluid which flows out.	
7.1	Detach washer fluid hose (4) from rear-end door washer fluid pump (M5/3)	On model 211.2 and removal of rear-end door washer fluid pump (M5/3). Collect washer fluid which flows out.	
8	Disconnect electrical connector (8) from washer fluid reservoir (6)	To do so unlock the retainer tab on the electrical connector (8) and remove the electrical connector (8) downwards from the washer fluid reservoir (6).	
9	Unclip bracket (5) from washer fluid reservoir (6)		
10.1	Use a mounting wedge to push off the windshield washer fluid pump (M5/1) from the washer fluid reservoir (6)	When removing windshield washer fluid pump (M5/1).	

		<p>i Note correct installation positions.</p> <p>S</p> <p>i Installation: Replace seal (7).</p>	*110589035900
11.1	Use a mounting wedge to push off the rear-end door washer fluid pump (M5/3) from the washer fluid reservoir (6)	<p>Only on model 211.2 and removal of rear-end door washer fluid pump (M5/3).</p> <p>i Note correct installation positions.</p> <p>S</p> <p>i Installation: Replace seal (7).</p>	*110589035900
12	Install in the reverse order		
13	<p>Fill washer fluid reservoir (6)</p> <p>Check windshield washer system fluid level and correct if necessary</p>		AP82.35-P-8210N
14	Perform function check on windshield washer system	i Switch on ignition and check the function of the window washer fluid pump (M5/1) by pressing the combination switch. A sufficient quantity of washer fluid must spray out of the spray nozzles.	
15.1	Perform function check on rear washer system	<p>only on model 211.2</p> <p>i Press the rear wiper switch to check the function of the rear-end door washer fluid pump (M5/3). A sufficient quantity of washer fluid must spray out of the spray nozzles.</p>	

Nm **Wheels**

Number	Designation	Model
BA40.10-P-1001-01A	Wheel bolt	Nm 130

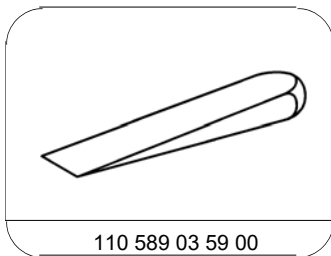

110 589 03 59 00

Mounting wedge