

AR72.10-P-2400T Remove/install exterior door handle on front door MODEL 211.0/ 2/ 6

Shown on door handle with code (889) Keyless go

- Outer door handle 1
- 2 Electrical connector (with code (889) Keyless go)
- Gaskets З

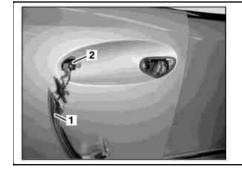


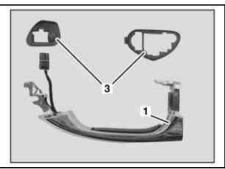

P72.10-2377-04

Shown on door handle with code (889) Keyless go

- Outer door handle 1
- 2 Electrical connector (with code (889) Keyless go)
- 4 Connector (with code (889) Keyless go)
- 5 Screwdriver
- 6 Bearing bracket

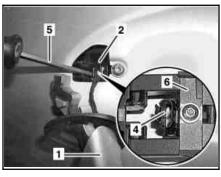

P72.10-2449-01

XX	Remove/Install		
1	Remove front door lock cylinder		AR72.10-P-4015T
2	Pull outer door handle (1) to the rear and remove out of the front door		
3.1	Separate electrical connector (2)	On vehicles with code (889) Keyless go i Hold connection (4) of electrical connector with screwdriver (5)This prevents the connection (4) from being unhooked from the bearing bracket (6).	
4	Remove outer door handle (1)	i Installation: Ensure that gaskets (3) seat properly.	
5	Install in the reverse order		
6	Perform function check		