


MODEL 211.0/ 2/ 6

- 1 Center air outlet
 2 Bolts
 3 Electrical connectors
 4 Electrical connector

N22 AAC control and operating unit
 (without code (581b) Comfort
 automatic air conditioning)

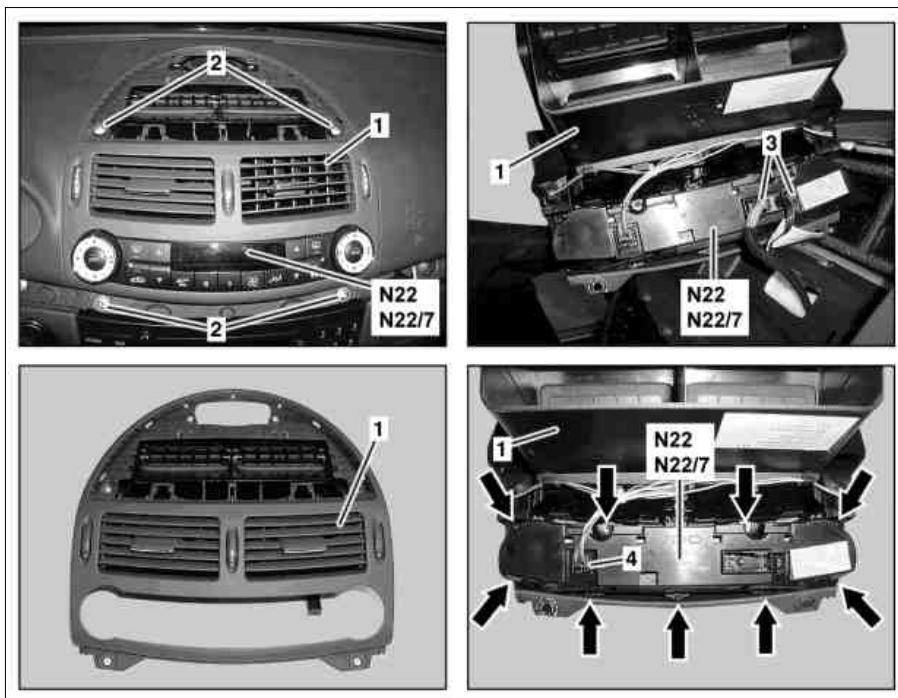

N22/7 Comfort AAC control and
 operating unit (with code (581b)
 Comfort automatic air
 conditioning)



P68.10-2724-06

Modification notes

5.7.06	"Disconnect/connect battery ground line" removed		
--------	--	--	--

 	Remove/install		
1	Remove speaker in instrument panel		AR82.62-P-7833T
2	Remove right trim strip on instrument panel		AR68.10-P-1180T
3	Remove bolts (2)		
4.1	Remove AAC control and operating unit (N22) together with center air outlet (1) from instrument panel until electrical connectors (3, 4) are accessible.	On vehicles without code (581b) Comfort automatic air conditioning	
4.2	Remove comfort AAC control and operating unit (N22/7) together with center air outlet (1) from instrument panel until electrical connectors (3, 4) are accessible.	On vehicles with code (581b) convenience automatic air conditioning	
5	Disconnect electrical connectors (3, 4)		
6	Unscrew bolts (arrows).		
7.1	Remove AAC control and operating unit (N22) from center air nozzle (1)	On vehicles without code (581b) Comfort automatic air conditioning	
7.2	Remove comfort AAC control and operating unit (N22/7) from center nozzle (1)	On vehicles with code (581b) convenience automatic air conditioning	
8	Install in the reverse order		