


MODEL 211.0/2/6 with CODE (581b) Convenience automatic air conditioning

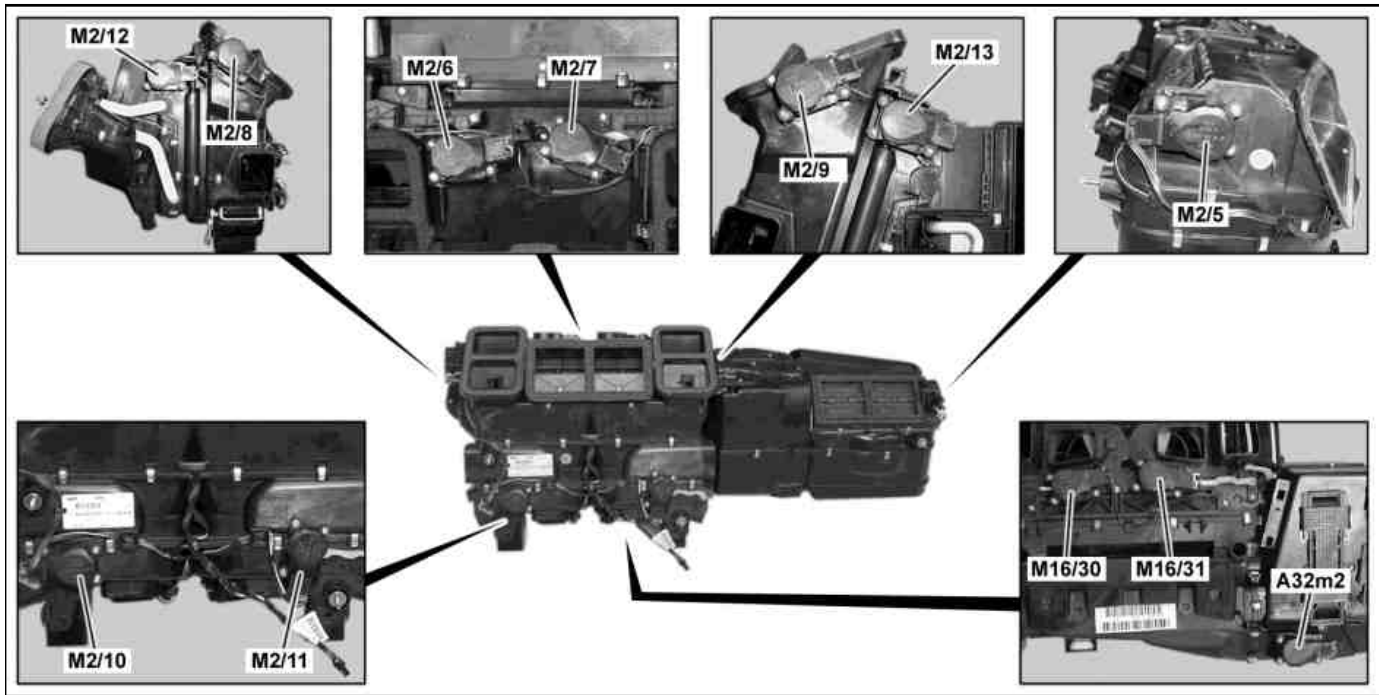

P83.40-2406-09

**A32m2** Activated charcoal filter flap adjustment motor  
**M2/5** Fresh air/recirculated air flaps actuator motor  
**M2/6** Left blended air flap positioning motor  
**M2/7** Right blended air flap positioning motor

**M2/8** Left defroster vent flap actuator motor  
**M2/9** Right defroster vent flap actuator motor  
**M2/10** Left footwell flap positioning motor  
**M2/11** Right footwell flap positioning motor  
**M2/12** Left center air outlet flap actuator motor

**M2/13** Right center air outlet flap actuator motor  
**M16/30** Left rear blending air flap actuator motor  
**M16/31** Right rear blending air flap actuator motor

	Comfort automatic air conditioning actuator motors, location	The activated charcoal filter flap adjustment motor (A32m2) and the actuator motors (M2/5, M2/6, M2/7, M2/8, M2/9, M2/10, M2/11, M2/12, M2/13, M16/30 and M16/31) are located on the comfort automatic air conditioning housing.	
	Comfort automatic air conditioning actuator motors, task		GF83.40-P-2183-01TT
	Comfort automatic air conditioning actuator motors, function		GF83.40-P-2183-02TT