

The RTL control module (N121) actuates the electrically driven trunk lid automatically or manually depending on the control elements.

**Purposes**

- Control of limited opening angle for trunk lid
- Evaluation of trunk lid/tailgate opening angle recognition sensor (B24/16)
- Overload protection for automatic opening and closing
- Synchronization of end stops
- Power locking of trunk lid lock
- Switch and controls illumination for RTL button (S62/26)

**Reading signals via passenger compartment CAN bus:**

- Opening via remote control key (A8/1)
- Actuation request via driver-side trunk lid open/close switch (S15/3)
- Open via trunk lid external operation switch (S88/8)
- Function requirements

**Read in signal lines**

- Lock via RTL button (S62/26), or with code (889) Keyless go, with trunk lid keyless go button (S62/21)
- Power locking switch (S88/14)
- Trunk lid/tailgate opening angle recognition sensor (B24/16)

**Switch for loads (via internal relay)**

- Trunk lid drive motor (M15/2)
- Trunk lid CL motor (M14/7), integrated in power locking switch (S88/14)