


MODEL 211.0 /2 /6**Control and operating unit at front**

- 1 Center air outlet
 2 Bolts
 3 Electrical connectors
 4 Electrical connector

N22 AACcontrol and operating unit
 (except code (581b) comfort
 automatic air conditioning)

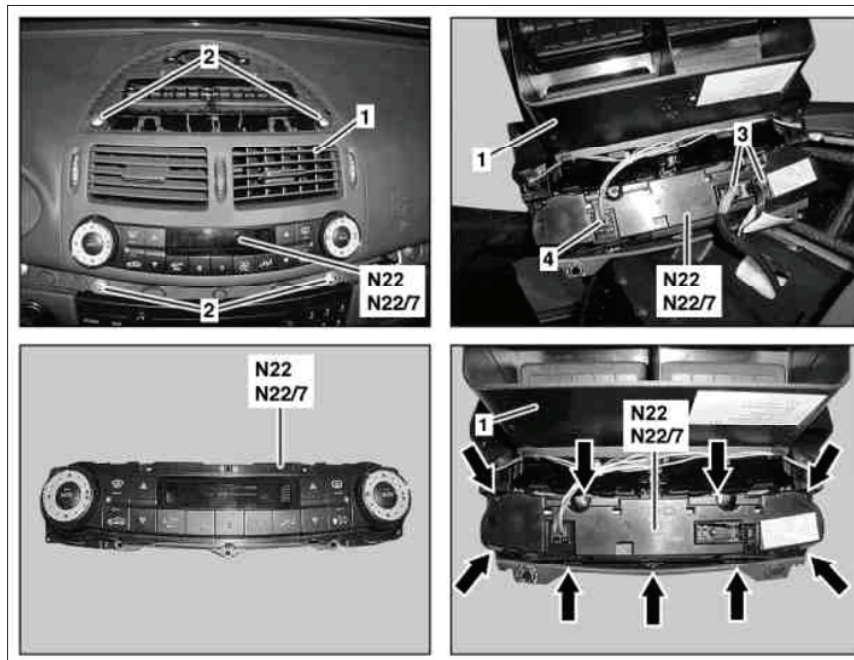

N22/7 Comfort AAC control and operating
 unit (with code (581b) comfort
 automatic air conditioning)



P83.25-2099-06

Modification notes

16.12.03	Disconnect/connect ground lead of battery added	Step 1	
----------	---	--------	--

	Remove/Install		
	Notes on avoiding damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Disconnect battery ground cable	Model 211.0/6 Model 211.2	AR54.10-P-0003T AR54.10-P-0003TA
2	Remove loudspeaker in instrument panel		AR82.62-P-7833T
3	Remove right trim strip on instrument panel		AR68.10-P-1180T
4	Unscrew bolts (2)		
5	Remove AAC control and operating unit (N22) or comfort AAC (C-AAC) control and operating unit (N22/7) together with the center air outlet (1) from the instrument panel until the electrical connectors (3, 4) are accessible		
6	Disconnect electrical connectors (3, 4)		
7	Unscrew screws (arrows).		
8.1	Remove AAC control and operating unit (N22) or comfort AAC (C-AAC) control and operating unit (N22/7) from the center air outlet (1)	Only when installing a new AAC control and operating unit (N22) or comfort AAC (C-AAC) control and operating unit (N22/7).	
9	Install in the reverse order		