


MODEL 211.0 /2 /6


- 1 Heater hose  
 2 Securing clamp  
 3 Rubber boot  
 4 Hose clamp

M16/32 Heat exchanger shutoff motor

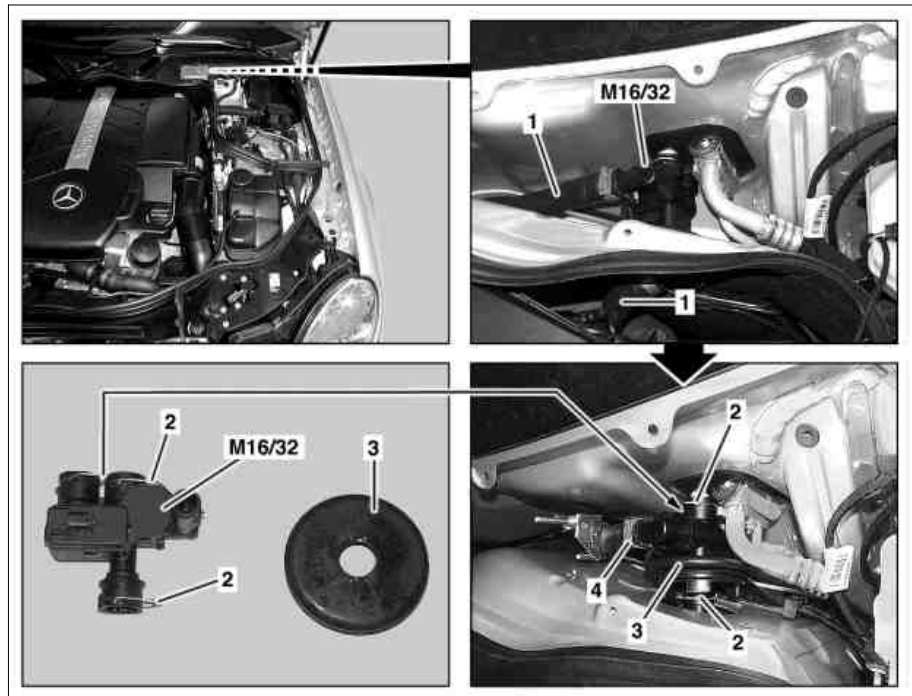

P83.25-2100-06

☒ ☒	Remove/install		
<p><b>⚠ Danger!</b></p> <p>1</p>	<p><b>Risk of injury</b> to skin and eyes caused by scalding from contact with hot coolant spray.  <b>Risk of poisoning</b> caused by swallowing coolant.</p> <p>Release pressure in coolant circuit</p>	<p>Do not open cooling system unless coolant temperature is below 90°C. Open cap slowly and release the pressure. Do not pour coolant into beverage containers. Wear protective gloves, protective clothing and safety glasses.</p> <p><b>i</b> To do this, carefully open reservoir cover and close again.</p>	<p>AS20.00-Z-0001-01A</p>
2	Remove wiper system		AR82.30-P-6400T
3	Unclamp hot water hose (1)	☒	*000589543700
4	Remove hose clamp (4) and disconnect heating water hose (1) from heat exchanger shutoff motor (M16/32)		
5	Push rubber boot (3) from engine partition and release securing clips (2)		
6	Detach connection fitting from heat exchanger shutoff motor (M16/32)		
7	Remove heat exchanger shutoff motor (M16/32)		
8	Disconnect electrical connector from heat exchanger shutoff motor (M16/32)		
9	Remove rubber boot (3)		
10	Install in the reverse order		
<p>11</p> <p><b>AP</b></p>	<p>Check and correct coolant level</p> <p>Check and adjust the fluid level in the engine cooling system. Inspect anticorrosion/antifreeze protection, adjust to correct concentration</p>		<p>AP20.00-P-2010Z</p>

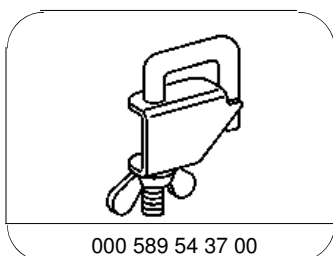

000 589 54 37 00

Clamping device