


Brake Wear Calculation

Remaining brake pad life is calculated using:

- Mileage since front brake pads replaced
- 50% front left brake pad wear sensor input

At 100% pad wear a warning is displayed.

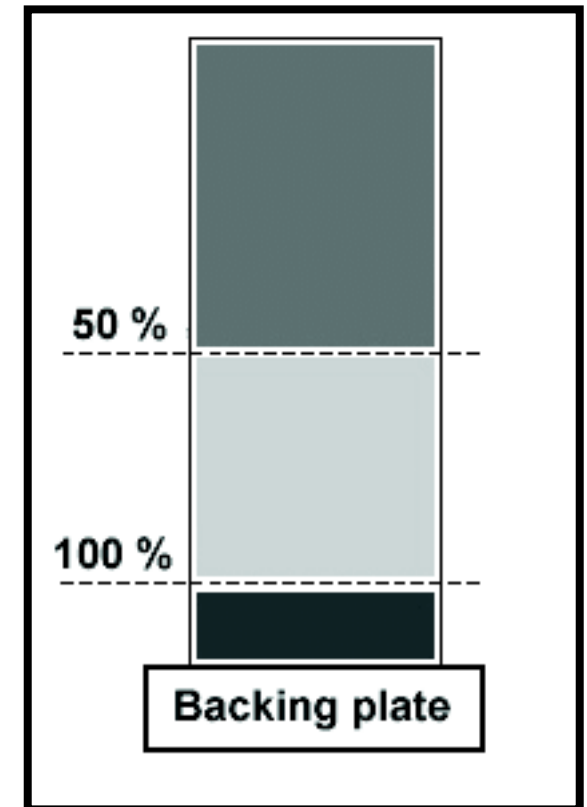

Brake Pad Wear Sensors

- Sensors designed differently to avoid improper installation
- One sensor on each front wheel
 - left = 50 % (S10/1)
 - right = 100 % (S10/2)
- One sensor right rear wheel
 - 100 % (S10/4)
- All sensors hard wired to N10/1

