


F34

F34

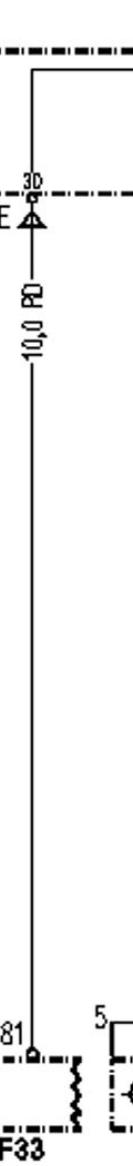


18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37

F34

F34

F34

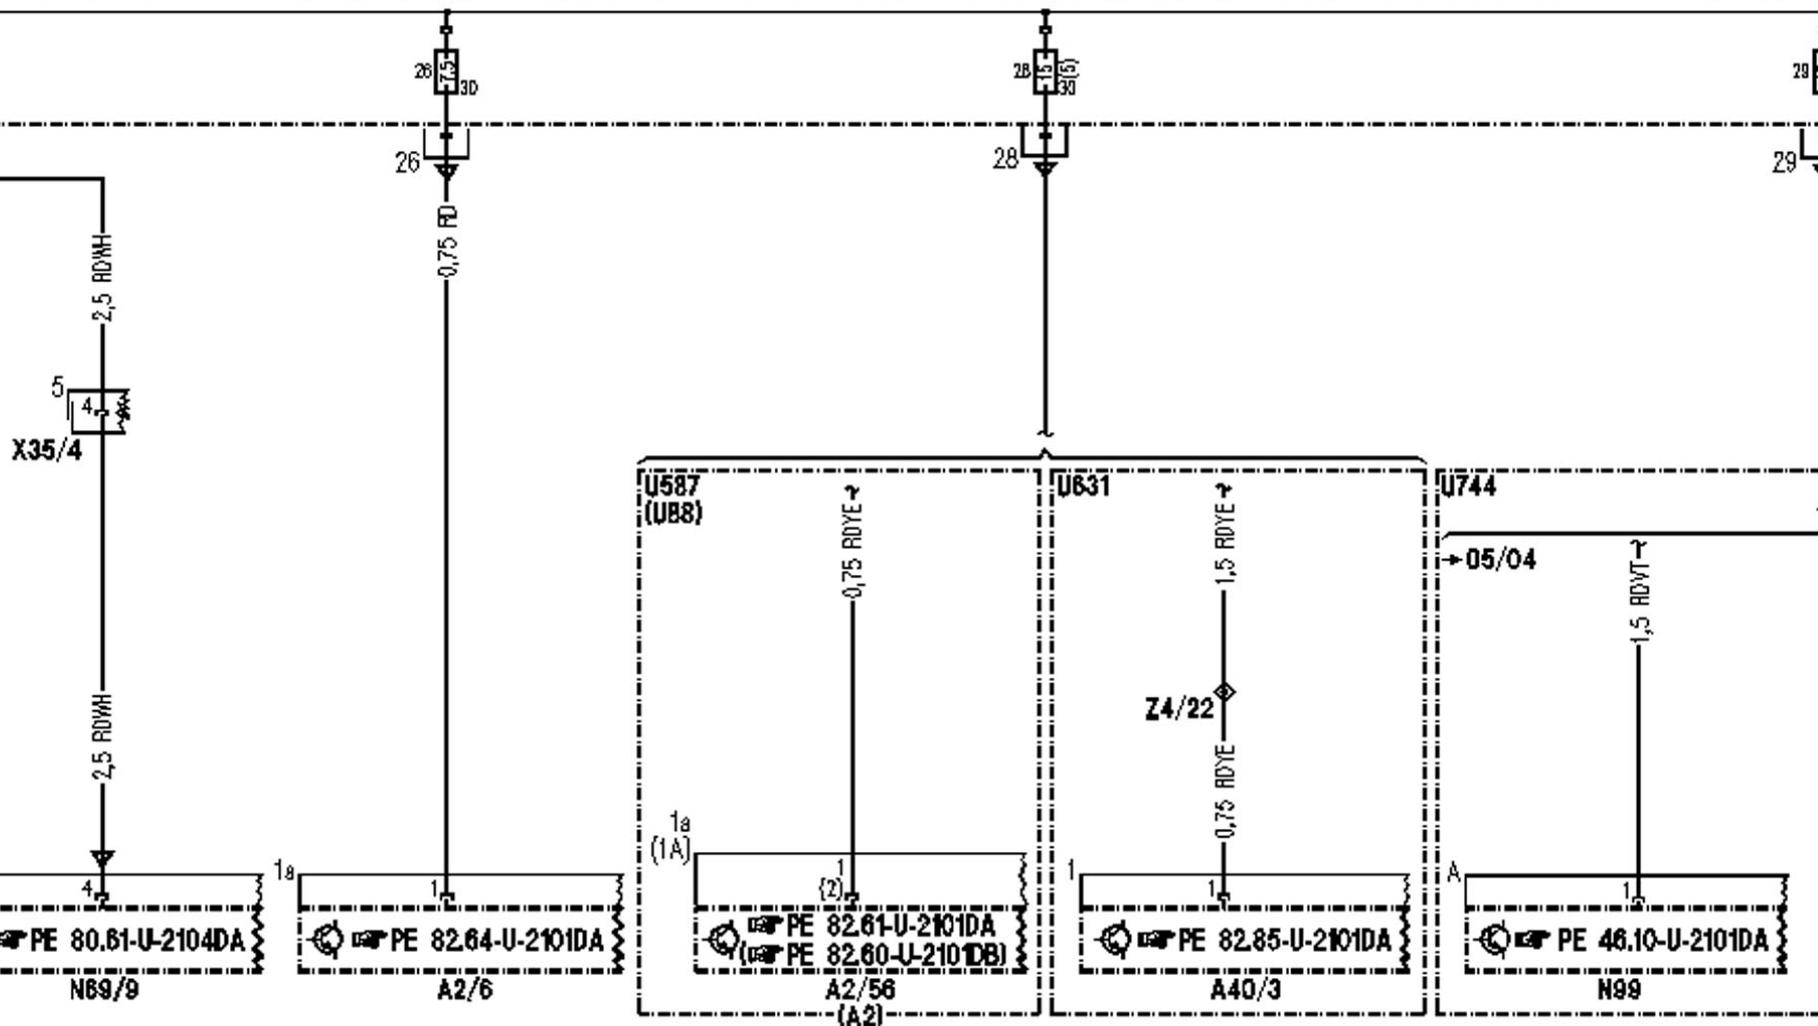


18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37

37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56


4

F34

F34

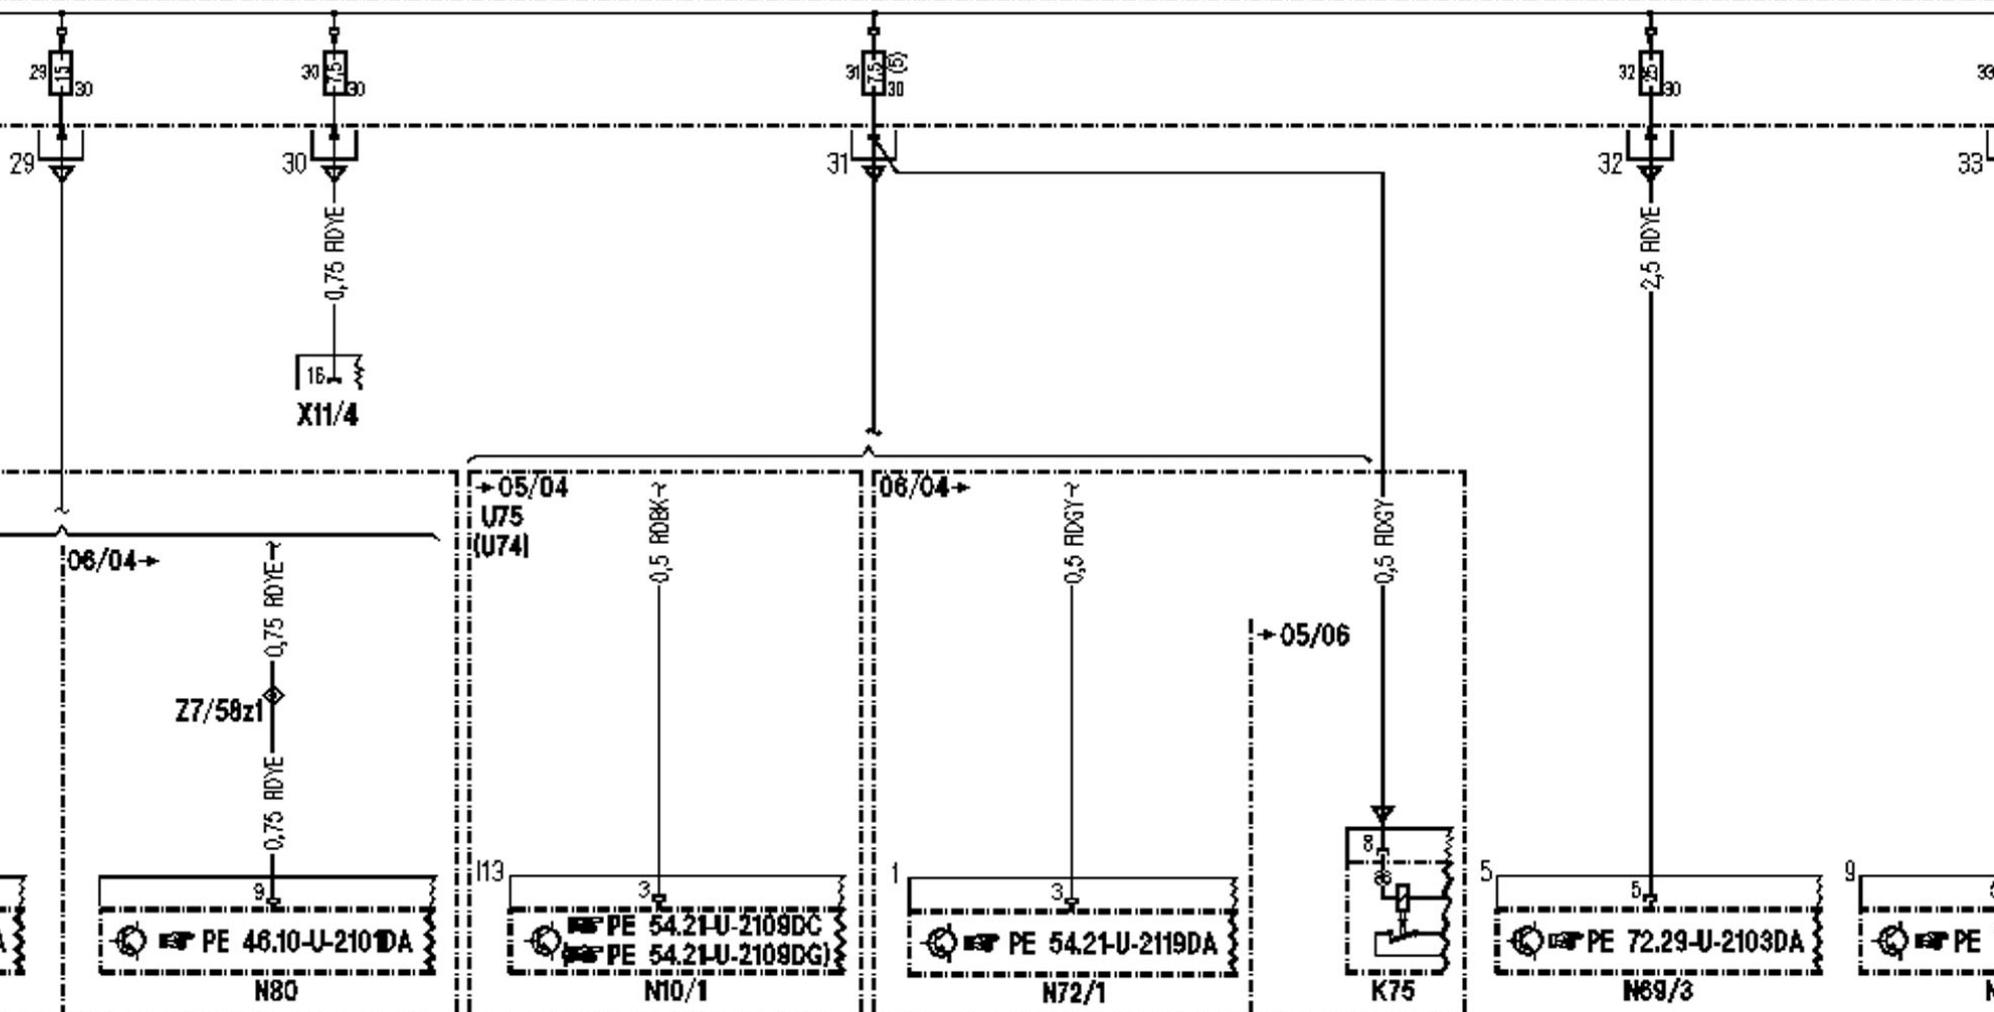


3 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56

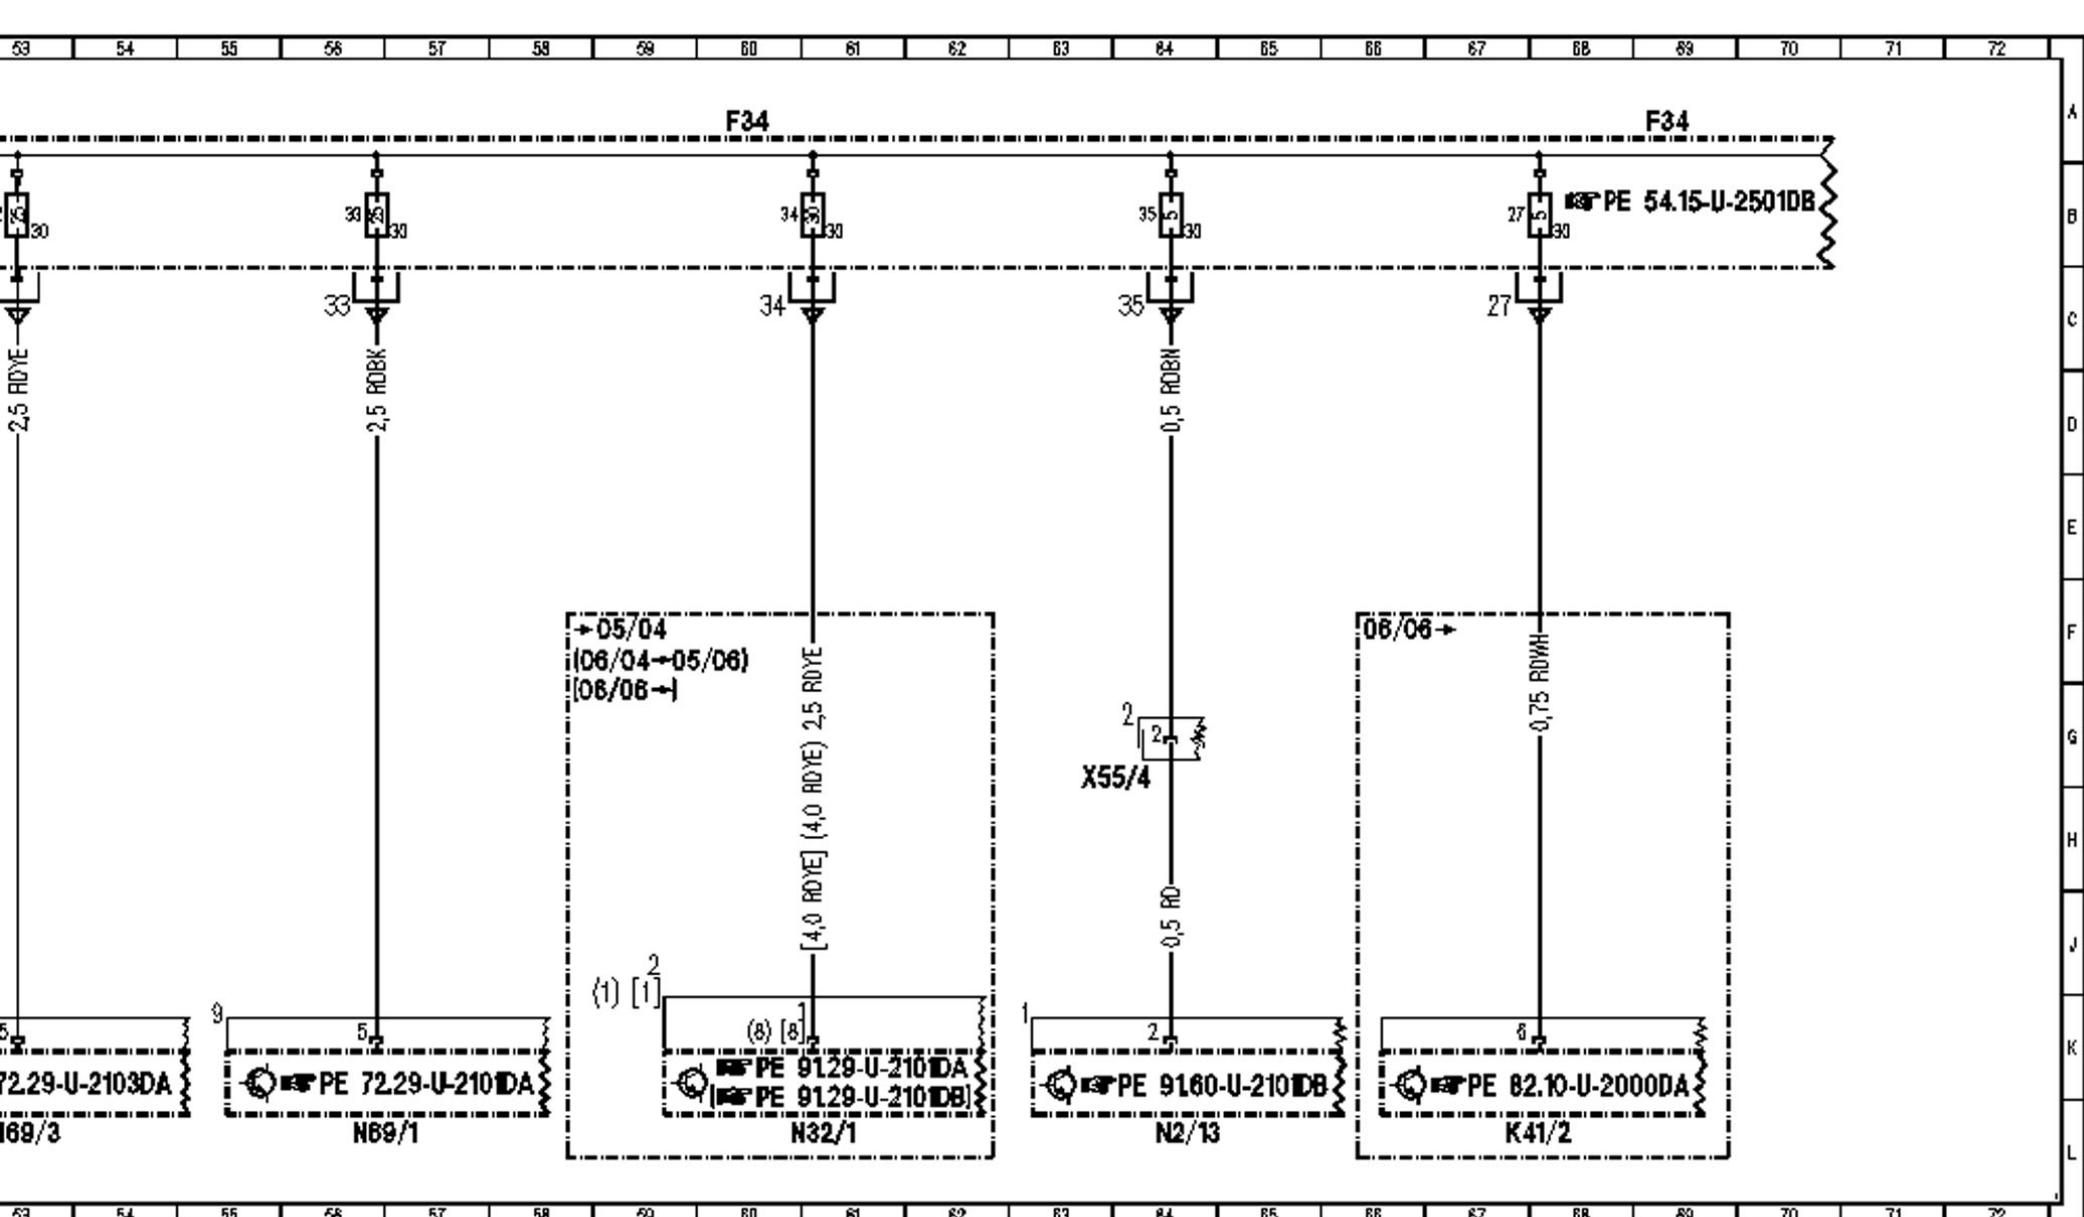

Item	Designation
A2	Radio
A2/6	CD changer
A2/56	Radio control panel and navigation unit
A40/3	COMAND operating, display and control module
F33	Rear prefuse
F34	Interior fuse box
F34f21	Fuse 21
F34f22	Fuse 22
F34f23	Fuse 23
F34f24	Fuse 24
F34f25	Fuse 25
F34f26	Fuse 26
F34f27	Fuse 27
F34f28	Fuse 28
F34f29	Fuse 29
F34f30	Fuse 30
F34f31	Fuse 31
F34f32	Fuse 32
F34f33	Fuse 33
F34f34	Fuse 34
F34f35	Fuse 35
K41/2	Circuit 15 relay
K75	Cutoff relay for interruptible loads
N2/13	WSS control unit (Weight Sensing System)
N10/1	Driver-side SAM control module with fuse and relay module
N32/1	Driver front seat adjustment control module with memory
N32/2	Front passenger front seat adjustment control module with memory
N69/1	Left front door control module
N69/2	Right front door control module
N69/3	Rear left door control module
N69/4	Rear right door control module
N69/9	Right rear door Keyless Go control module
N72/1	Upper control panel control module
N80	Steering column module
N99	DC/DC converter control module
N102	Rear module Keyless Go control module
U74	Valid for diesel vehicles

<u>U75</u>	Valid for gasoline engines
<u>U88</u>	Valid for radio control panel
<u>U587</u>	Valid for radio with APS
<u>U631</u>	Valid for version with COMAND
<u>U744</u>	Valid for steering wheel heater
<u>X11/4</u>	Data link connector
<u>X35/4</u>	Right rear door separation point
<u>X55/4</u>	Front passenger seat contacting strip
<u>Z4/22</u>	COMAND circuit 30 connector sleeve
<u>Z7/53</u>	Circuit 30 connector sleeve, Keyless Go
<u>Z7/58z1</u>	Circuit 30z connector sleeve

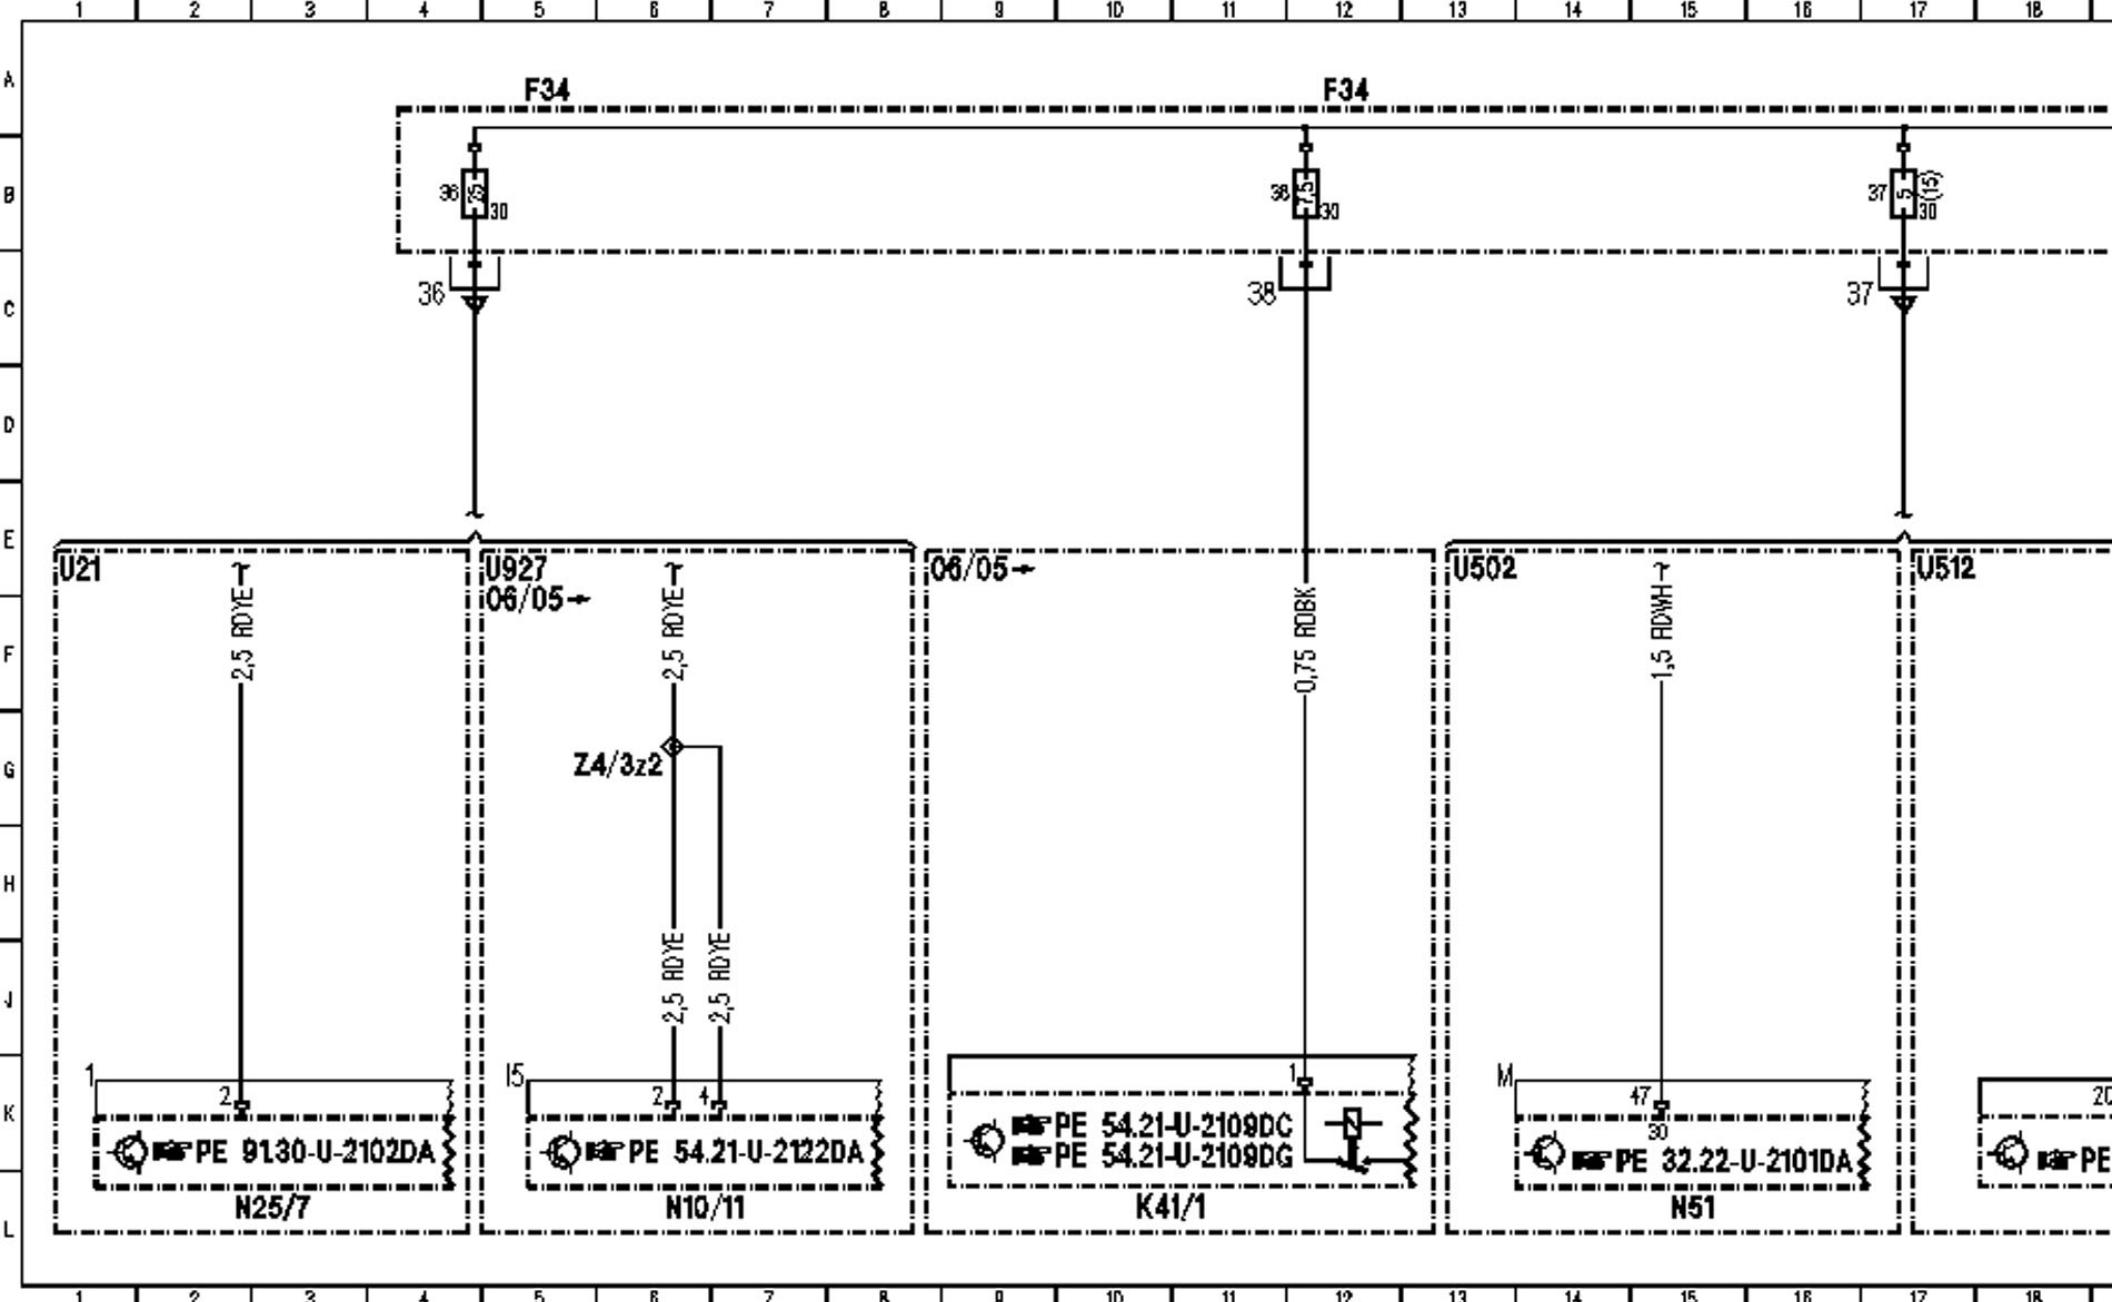

18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37

F34

F34

F34

2

0,5 RDWH ~

38 5 39
39 0,75 RDWT

41 5 40
41 0,5 RDWH

40 5 41
40 0,5 RDWT

1

4

8

6

20
PE 32.33-U-2101DA
N97

1
4
PE 54.21-U-2120DA
N72

8
6
PE 54.21-U-2124DA
N93

→ 05/04
| 06/04 → |

1

(2)

3
(3)
PE 54.21-U-2119DA
(PE 91.30-U-2102DA)
N72/1
(N25/7)

→ 05/04
| 06/04 → |
(1,5 RDWT) 0,5 RDGY

→ 05/04

|

0,5 RDGY


6
8
K75

U15D
(U15D
(U425)

1,5 RDWT ~

5
3
PE 07.61-U-2101DA
(PE 07.61-U-2101DC)
(PE 07.61-U-2101DG)
N3/10

18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37

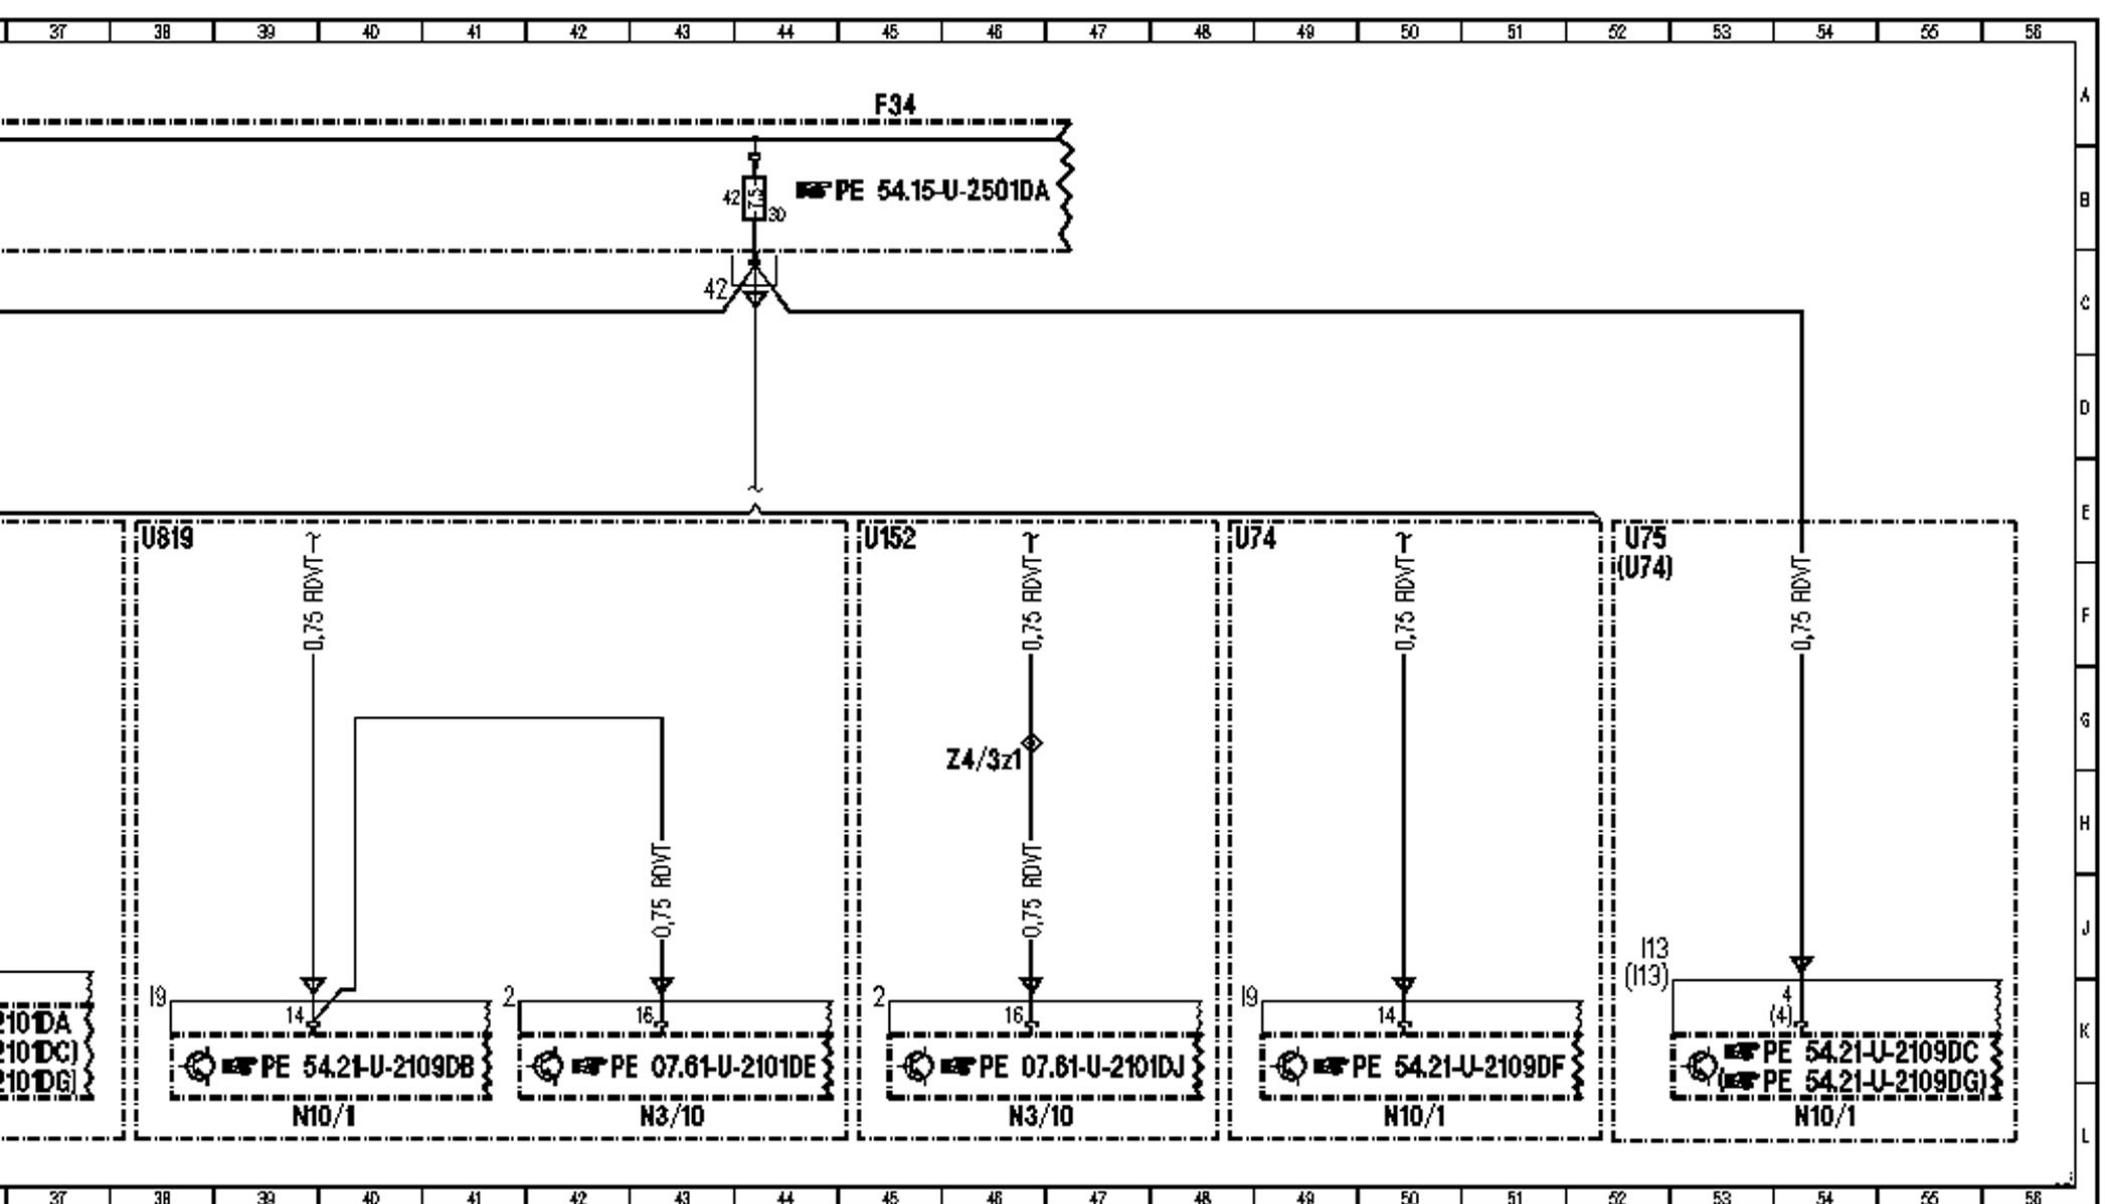

<u>Item</u>	<u>Designation</u>
F34	Interior fuse box
F34f36	Fuse 36
F34f37	Fuse 37
F34f38	Fuse 38
F34f39	Fuse 39
F34f40	Fuse 40
F34f41	Fuse 41
F34f42	Fuse 42
K41/1	NECK-PRO head restraint relay
K75	Cutoff relay for interruptible loads
N3/10	ME-SFI [ME] control module
N10/1	Driver-side SAM control module with fuse and relay module
N10/11	Passenger-side SAM control module
N25/7	HS [SIH] and seat ventilation control module
N51	AIRMATIC with ADS control unit
N72	Lower control field control module
N72/1	Upper control panel control module
N93	Central gateway control module
N97	Rear axle level control system control module
U21	Valid for seat heaters
U74	Valid for diesel vehicles
U75	Valid for gasoline engines
U150	Valid for engine 112
U151	Valid for engine 113
U152	Valid for engine 156
U425	Valid for E 55 AMG
U502	Valid for AIRMATIC
U512	Valid for level control
U819	Valid for engine 272
U927	Valid for basic heated seats
Z4/3z1	Circuit 30 connector sleeve
Z4/3z2	Circuit 30 connector sleeve