

P68.30-2655-07

Shown on vehicle with code (943)

Automatic extendable main loading floor

 
 
- 1 Rear center section paneling
2 Bolts

3 Striker eye flap

4 Load compartment floor lock

Modification notes

30.3.06	"Remove/install side paneling in load compartment" added	Step 1	
---------	--	--------	--

	Remove/install		
1	Remove left side paneling in load compartment		AR68.30-P-1180T
2	Open load compartment floor upwards		
3	Unscrew screws (2) from rear center section paneling (1).		
4.1	Unscrew mounting screws on loading floor lock (4).	On vehicles without code (943) Automatic extendable main loading floor	
5	Remove rear center section paneling (1) from retaining arrests toward rear	 Installation: Ensure that rear center section paneling (1) is seated correctly below left and right paneling (arrows).	
6.1	Remove locking eye flap (3) from rear center section paneling (1).	Only when replacing rear center section paneling (1) or locking eye flap (3).	
7	Install in the reverse order		