GF54.15-P-1257-03T	Relay assignment of fuse and relay box in	⊯ GF
	engine compartment, left	

Driver-side fuse and relay module

f43 to f67 Fuses


N10/1 Driver-side SAM control unit

with fuse and relay module

I to S Relay

X Direction of travel

The relay S (AIRmatic relay (K67)) is only clipped onto the driver-side SAM control unit with fuse and relay module.

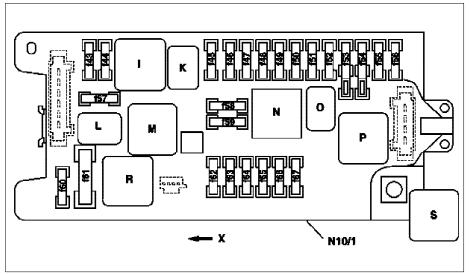

P54.15-2414-05

Relay	Designation	
I	Terminal 87 relay, engine (N10/1kl)	
K	Terminal 87 relay, chassis (N10/1kK)	
L	Starter relay (N10/1kL)	
М	SEQ pump control relay (N10/1kM)	
N	Terminal 15 relay (N10/1kN)	
0	Fanfare horn relay (N10/1kO)	
Р	Terminal 15R relay (N10/1kP)	
R	Oil cooler air pump/fan relay (N10/1kR)	
S	AIRmatic relay (K67) only for code (489) Airmatic Dual Control (semi-active air suspension)	