AR68.20-P-4811T	Remove/install load compartment floor front section
MODEL 211.2	

- 1
- 2
- 3



P68.20-2831-06

XX	Remove/Install		
1	Remove stowage compartment (2) from load compartment.	i See Owner's Manual	
2	Unclip load compartment floor front section (1) with assembly wedge (3) and remove	3	*110589035900
3	Install in the reverse order		

