

P82.10-3418-09

| A1 A7/3n1 B22/2 B22/3 B22/8 B22/9 B38/2 E1e1 E1e2 E1e3 E1e5 E1l1 E1m1 | Instrument cluster SBC control unit Front axle level sensor Rear axle level sensor (with code (489) Airmatic (semi- active air suspension)) Right front level sensor (with code (489) Airmatic (semi- active air suspension)) Rain/light sensor Left high beam Left low beam Left standing and parking lamp Left turn signal lamp Left high beam solenoid Left headlamp range adjustment motor | E1m2 E1n2 E1n3 E1n4 E2e1 E2e2 E2e3 E2e5 E2l1 E2m1 E2m2 | Left dynamic curve illumination motor (with code (615) Bi-xenon headlamp unit with integrated curve illumination) Xenon headlamp ignition module HRA [LWR] power module Xenon headlamp supply module Right high beam Right low beam Right standing and parking lamp Right turn signal lamp Right high beam solenoid Right headlamp range adjustment motor Right dynamic curve illumination motor (with code (615) Bi-xenon headlamp unit with integrated curve illumination) | E2n2 E2n3 E2n4 E3e1 E3e2 E3e3 E3e4 E3e5 E4e1 E4e2 E4e3 E4e4 E4e5 E4e7 E5/1 | Xenon headlamp ignition module HRA [LWR] power module Xenon headlamp supply module Outer left turn signal lamp Outer left taillamp, parking lamp, rear fog lamp Left backup lamp Left stop lamp Inner left taillamp, rear fog lampE3e7 Inner left turn signal lamp Outer right turn signal lamp Outer right taillamp, parking lamp, rear fog lamp Right backup lamp Right stop lamp Inner right taillamp, rear fog lamp Inner right taillamp, rear fog lamp Inner right turn signal lamp Left front fog lamp |
|---|--|--|--|--|--|
| E5/2 E6/1 E6/2 E6/5 E6/6 E19/1 E19/2 E21 N10/1 N10/2 N10/11 | Right front fog lamp Left front side-marker lamp (for code (494) USA version) Right front side-marker lamp (s) (for code (494) USA version) Left outside mirror turn signal lamp Right outside mirror turn signal lamp Left license plate lamp Right license plate lamp Center high-mounted stop lamp Driver-side SAM control unit with fuse and relay module Rear SAM control unit with fuse and relay module Passenger-side SAM control unit | N15/5 N15/6 N28/1 N47-5 N51 N69/1 N69/2 N70 N71 N72/1 | Electronic selector lever module control unit (with transmission 722) Automated manual transmission control unit (with transmission 716) Trailer connection unit [AAG] control unit (with code (550) Trailer hitch) EPS control unit AIRmatic with ADS control unit (with code (489) Airmatic (semi-active air suspension)) Door control unit front left Door control unit front right Overhead control panel control unit Headlamp range adjustment control unit Upper control panel control unit | N72/1s5 N73 N80 N93 S1 S4 S9/1 S16/2 X58 A B CAN B CAN-C SBC CAN HRA bus | Hazard warning system switch EIS [EZS] control unit Steering column module Central gateway control unit Rotary light switch Combination switch Stop lamp switch (4-pin) Backup lamp switch Trailer hitch socket, 13-pin (with code (550) Trailer hitch) Standard Airmatic (with code (489) Airmatic (semi-active air suspension)) CAN class B bus CAN Class C CAN bus for brake system Headlamp range adjustment bus |