
MODEL 211.0/2

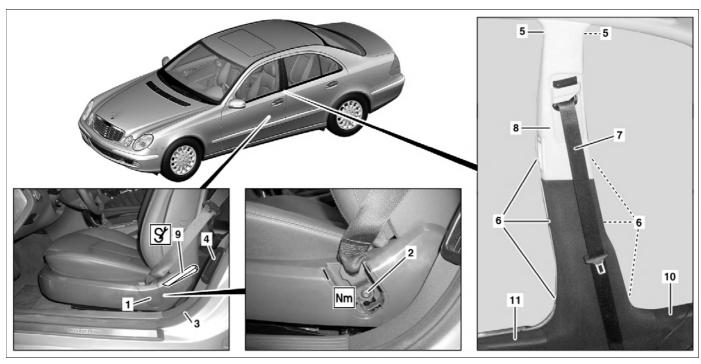


P68.30-2480-09


Shown on model 211.0

- 1 Panel
- 2 Screw
- 3 Edge guard

- 4 Air intake grate (with code (581b) Comfort automatic air conditioning)
- 5 Clamp
- 6 Clips

- 7 Seat belt
- 8 B-pillar paneling
- 9 S Mounting wedge
- 10 Front entrance paneling
- 11 Rear entrance paneling

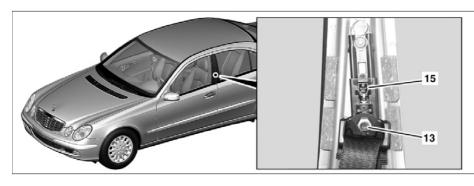

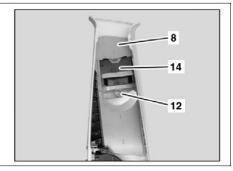

P68.30-2481-07

Shown on model 211.0

8 B-pillar paneling

12 Mount

13 Pin

14 Pushbutton

15 Locking pawl

Modification notes


25.7.03	Operation incorporated	Step 17	
---------	------------------------	---------	--

X	Removing		
1	Position seat toward front and move rear seat surface upward		
2	Remove cover (1) from front seat with assembly wedge (9)	A	*110589035900
3	Remove the screw (2) and remove belt end fitting		
4	Remove edge guard (3) in area of B-pillar paneling (8) on both sides		
5.1	Remove air intake grate (4) from B-pillar paneling (8)	On vehicles with code (581b) convenience automatic air conditioning	
6	Remove front door sill trim (10) and rear door sill trim (11)	Lift front door sill trim (10) and rear door sill trim (11) out toward B-pillar paneling (8)	

Press B-pillar paneling (8) off of clips (5. 6)	8	*110589035900
and B-pillar with assembly wedge		
Move seat belt (7) through B-pillar paneling (8)		
Remove clips (5) from B-pillar	3	*110589035900
Remove clips (6) from B-pillar paneling (8)		
Install		
Insert clips (6) into B-pillar		
Insert clips (5) into B-pillar paneling (8)		
Move seat belt (7) through B-pillar paneling (8)		
Clip B-pillar paneling (8) into B-pillar	pawl (15).	
Check seat belt height adjustment at B-pillar for proper function	i It should be possible to adjust and arrest the belt height adjustment.	
Install front door sill trim (10) and rear door sill trim (11)		
Insert air intake grate (4) into B-pillar paneling (8)	On vehicles with code (581b) convenience automatic air conditioning	
Install edge guard (3) on B-pillar on both sides		
Insert belt end fitting and tighten with bolt (2) to front seat	Nm	*BA91.40-P-1001-01A
Install covering (1)		
	Move seat belt (7) through B-pillar paneling (8) Remove clips (5) from B-pillar Remove clips (6) from B-pillar paneling (8) Install Insert clips (6) into B-pillar Insert clips (5) into B-pillar paneling (8) Move seat belt (7) through B-pillar paneling (8) Clip B-pillar paneling (8) into B-pillar Check seat belt height adjustment at B-pillar for proper function Install front door sill trim (10) and rear door sill trim (11) Insert air intake grate (4) into B-pillar paneling (8) Install edge guard (3) on B-pillar on both sides Insert belt end fitting and tighten with bolt (2) to front seat	and B-pillar with assembly wedge Move seat belt (7) through B-pillar paneling (8) Remove clips (5) from B-pillar Remove clips (6) from B-pillar paneling (8) Install Insert clips (6) into B-pillar paneling (8) Move seat belt (7) through B-pillar paneling (8) Clip B-pillar paneling (8) into B-pillar Clip B-pillar paneling (8) into B-pillar Insert clips (5, 6) are seated correctly. Check seat belt height adjustment at B-pillar for proper function Install front door sill trim (10) and rear door sill trim (11) Insert air intake grate (4) into B-pillar paneling (8) Install edge guard (3) on B-pillar on both sides Insert belt end fitting and tighten with bolt (2) to front seat

$\overline{^{\rm Nm}}$ Seat belts/emergency tensioning retractors

Number	Designation		Model 211.0	Model 211.2
BA91.40-P-1001-01A	Screw on belt end fitting	Nm	32	32

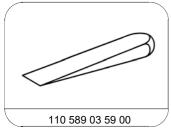

Mounting wedge