



MODEL 211.0

Shown on left-side luggage compartment lining

- 4 Expansion clip
5 Hinge lever passage frame

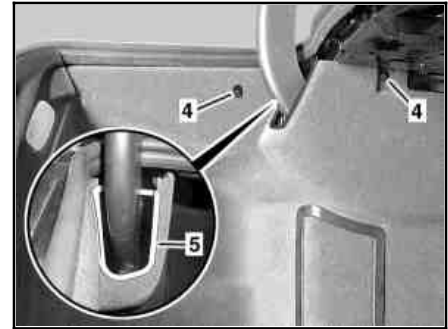

P82.10-4456-01

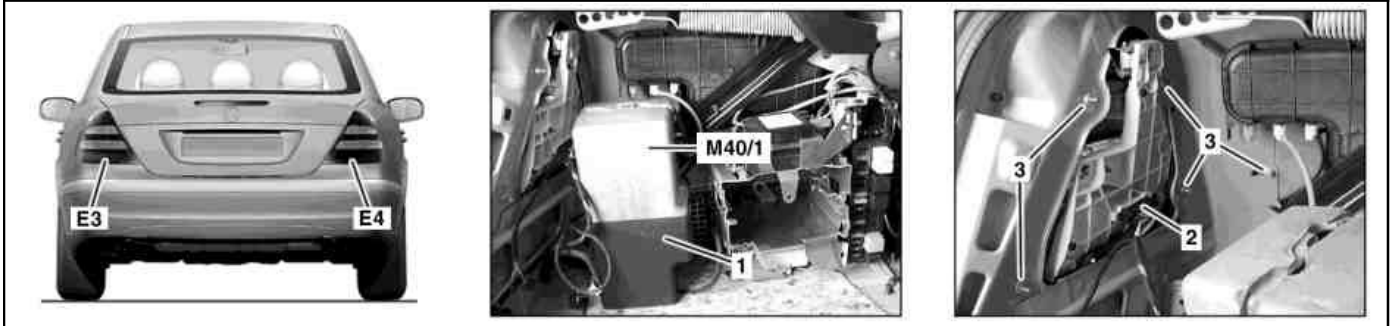

P82.10-2969-07

- 1 Bracket (with code (433) Left dynamic seat, incl. multi-contour seat or with code (434) Right dynamic seat, incl. multi-contour seat)

 
- 2 Electrical connector
3 Nuts

- E3 Left taillamp
E4 Right taillamp

- M40/1 Pneumatic pump for dynamic seat control (with code (433) Left dynamic seat, incl. multicontour seat or with code (434) Right dynamic seat, incl. multicontour seat)

Modification notes

8.3.06	Complete removal of side luggage compartment linings has been superseded with partial removal	Operation steps 1 to 4	
--------	---	------------------------	--

	Remove/install		
1	Remove trim from rear end center assembly		AR68.30-P-4785T
2	Remove expansion clips (4)		
3	Remove hinge lever passage frame (5)		
4	Release left or right side luggage compartment lining until left taillamp (E3) or right taillamp (E4) is accessible		
5.1	Remove bracket (1) with pneumatic pump for dynamic seat control (M40/1) from retainer and place to one side	Only when removing left taillamp (E3) on vehicles with code (433) Left dynamic seat, incl. multicontour seat or with code (434) Right dynamic seat, incl. multicontour seat.	
6	Disconnect electrical connector (2)		
7	Remove nuts (3) and remove left taillamp (E3) or right taillamp (E4)		
8	Install in the reverse order		