



MODEL 211 with ENGINE 112, 113, 156, 271, 272, 273, 628, 642, 646, 647, 648

- 1 Filler neck
- 2 Filler hose
- 9 Ground cable
- 10 Hose
- 11 Activated charcoal canister


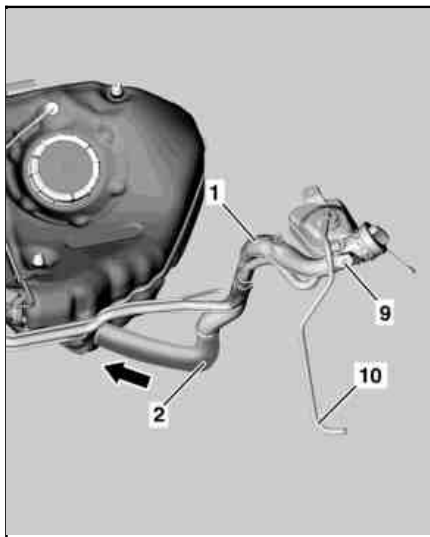


P47.10-2135-02

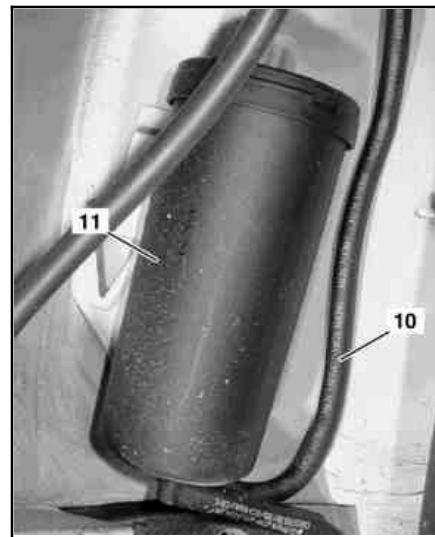


 




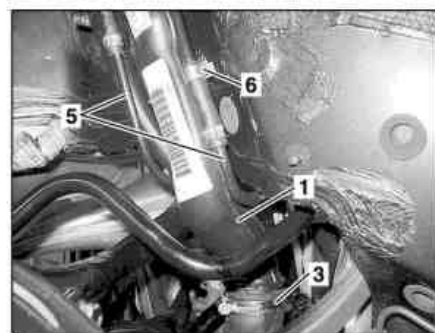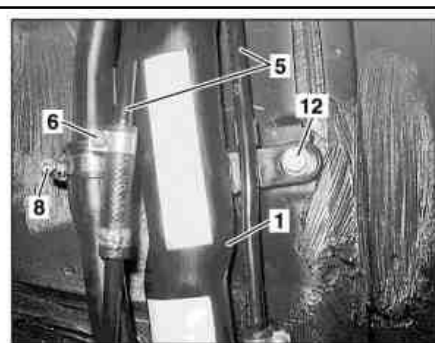






P47.10-2136-02

- 1 Filler neck
- 2 Filler hose
- 3 Hose clamp
- 4 Rubber seal
- 5 Connection lines
- 6 Hose clamps
- 7 Vent line
- 8 Hose clamp
- 12 Bolts



P47.10-2137-06

|   | Remove/install | | |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------|
| 1 | Drain fuel tank. | Vehicles with diesel engines Vehicles with gasoline engine | AR47.10-P-4001T AR47.10-P-4001TB |
|  AP | Detach right rear wheel Remove/install wheels, rotate if necessary | | AP40.10-P-4050Z |
| 3 | Remove fender liner in right rear fender | | AR88.10-P-1400T |
| 4 | Pinch off the filler hose (2) at the filler fitting (1) of the fuel tank |  In order to prevent the ingress of contaminants into the fuel tank.  | *WH58.30-Z-1014-02A |
| 5 | Loosen hose clamp (3) and detach filler hose (2) from filler neck (1) of the fuel tank |  Installation: Check hose clamp (3) and filler hose (2) for damage, replace if necessary. | |
| 6 | Open fuel filler flap and remove filler cap | | |
| 7 | Press rubber seal (4) out of bodywork |  Installation: Check rubber seal (4) for damage and replace if necessary. | |
| 8 | Loosen hose clamps (6) and remove connecting lines (5) |  Installation: Check hose clamps (6) and connecting lines (5) for damage and replace if necessary. | |
| 9 | Loosen hose clamp (8) and remove vent line (7) |  Installation: Check hose clamp (8) and vent line (7) for damage and replace if necessary. | |

| | | | |
|-------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|
| 10 | Disconnect the hose (10) at the activated charcoal canister (11) | Vehicles with gasoline engine | |
| 11 | Unscrew bolts (12) and remove filler neck (1) in the downward direction |  Installation: Check ground line (9) for damage and replace filler neck (1) if necessary. | |
| 12 | Install in the reverse order | | |
|  | Checking | | |
|  Danger! | Risk of accident caused by vehicle starting off by itself when engine is running. Risk of injury caused by contusions and burns during starting procedure or when working near the running engine Carry out an engine test run and check the fuel system for leaks | Secure vehicle to prevent it from moving by itself. Wear closed and snug-fitting work clothes. Do not grasp hot or rotating parts.  In the event of leakage determine and eliminate cause, otherwise malfunctions and environmental pollution will occur. | AS00.00-Z-0005-01A |
| 13 | | | |

Commercially available tools

| Number | Designation |
|--------------------|---------------------------------------------|
| WH58.30-Z-1014-02A | Pinch-off pliers for hoses up to dia. 60 mm |