


## MODEL 211

- 1 Lever
- 2 Handle
- 3 Locking lever
- 4 Left engine hood hinge
- 5 Right engine hood hinge

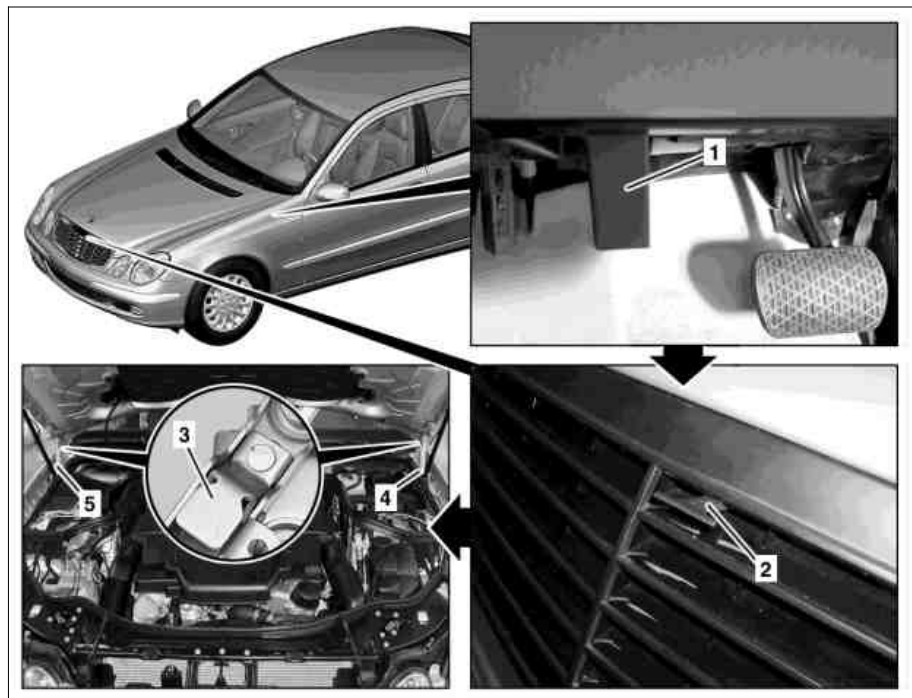

P88.40-2237-06

	Opening		
<b>Danger!</b>	<b>Risk of injury. Fingers may get jammed or crushed</b> when removing, installing or adjusting hoods, doors, gates and sliding roofs.	Keep all body parts clear of moving components.	AS00.00-Z-0011-01A
1	Pull release lever (1) in driver's footwell to release engine hood		
2	Pull handle (2) out of radiator paneling to stop and move engine hood to normal position.		
	<b>Moving to upright position</b>		
3	Press locking lever (3) on left engine hood hinge (4) and press engine hood slightly upward	Press engine hood upward so that locking lever can no longer arrest.	
4	Press locking lever (3) on right engine hood hinge (5) and position engine hood vertically.		
	<b>Closing</b>		
5	Lift engine hood slightly, press locking lever (3) on left hinge lever (4) and close engine hood		
6	Check whether engine hood is locked properly		