



P72.20-2316-09

1 Bolts
2 Control cables
3 Screw

4 Bolts
5 Rear-end door
6 Electrical connector

A12/1 Rear door handle
A72 Rear door locking unit

	Remove/Install		
1	Remove tailgate handle		AR72.20-P-3650T
2	Remove bolts (1)		*BA72.20-P-1008-02A
3	Fold tailgate handle (A12/1) down		
4	Disconnect electrical connectors from tailgate handle (A12/1)		Four electrical connectors.
5	Unhook control cables (2) from tailgate handle (A12/1)		
6	Unscrew screw (3) and remove tailgate handle (A12/1)		*BA72.20-P-1008-02A
7	Remove bolts (4)	 	Replace self-locking bolts (4). *BA72.20-P-1003-02A
8	Remove tailgate locking unit (A72) from tailgate (5) until electrical connector (6) is accessible.		
9	Disconnect electrical connector (6) and remove tailgate locking unit (A72)		
10	Install in the reverse order		

Tailgate

Number	Designation	Model 211.2
BA72.20-P-1003-02A	Screws at tailgate lock	Nm 10
BA72.20-P-1008-02A	Screw for handle flap on tailgate	Nm 9